


### Additional information for use in the hazardous area

(consist of "Class I, Div. 2, Groups A, B, C & D, T5")


For devices type 8681 with code PR02 on the label follow the instructions in this additional as well as the respective operating instructions concerning use in the potentially explosive area.

#### Label with type key

VAR = PR02:

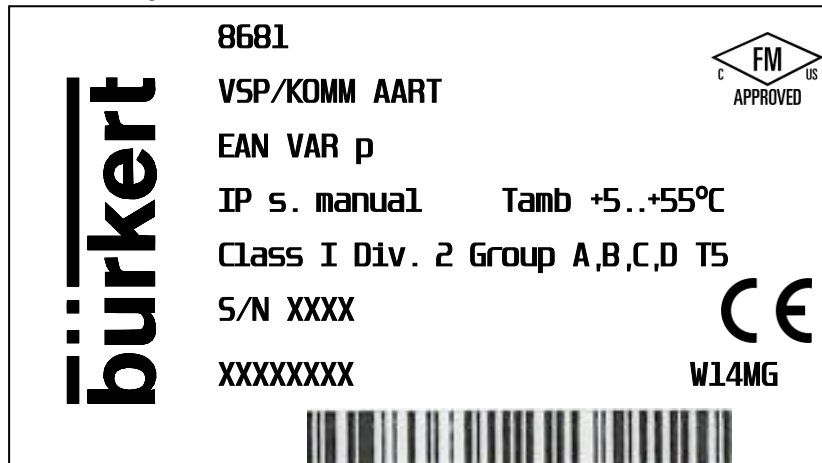

Example:

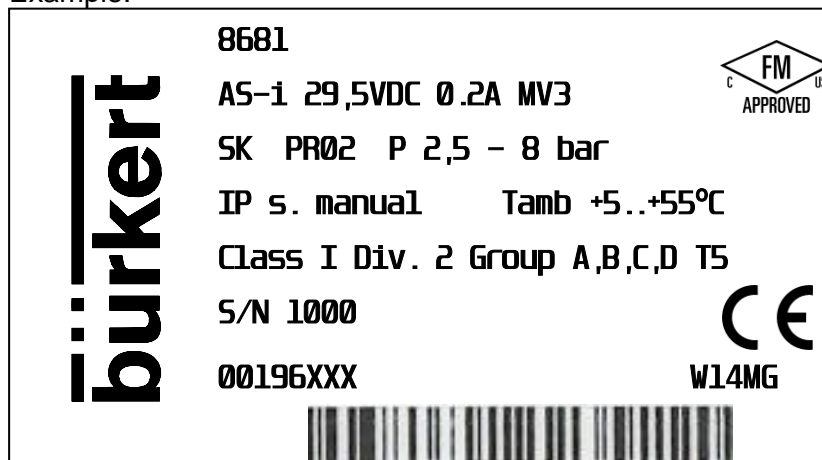

To avoid the risk of explosion, observe the following information when performing installation and maintenance in the hazardous area:

- In explosive atmosphere do not open the housing of the device when voltage is present.
- Use only cables and cable glands which are authorized for the particular application area and are screwed together according to the appropriate installation instructions.
- Observe the applicable safety regulations also for installation according to "ANSI/NFPA 70, NEC and CSA C22.1, CEC, Part I" per US and CAN electrical code.