



### T-diaphragm valve with manually operated actuator

- Valve body and diaphragm are available in various materials and variants
- Wetted surfaces from  $Ra \leq 0.38 \mu m \dots \leq 1.6 \mu m$  (optionally electropolished)
- Available in all common connection sizes and variants

Product variants described in the data sheet may differ from the product presentation and description.

#### Can be combined with

	<b>Type SV02</b> Diaphragms	▶
	<b>Type 2974</b> T-diaphragm valve with manually operated actuator (FullFunction)	▶
	<b>Type 2934</b> T-diaphragm valve with manually operated actuator (basic)	▶
	<b>Type 2103</b> 2/2-way diaphragm valve with pneumatic stainless steel actuator (Type ELEMENT) for decentralised automation	▶
	<b>Type 2036</b> Robolux multiway diaphragm valve, pneumatically operated	▶
	<b>Type 8098</b> FLOWave SAW flowmeter	▶

#### Type description

The manually operated diaphragm valve Type 3234 consists of a manually operated actuator, a diaphragm and a T-valve body. The manual actuator, optionally with a plastic or stainless steel handwheel, ensures use in hygienic or aggressive ambient conditions. The flow-efficient valve bodies with little dead space enable high flow rates and a wide range of possible uses. The valve body and the diaphragm are available in all common materials and variants. The actuator has a compact, autoclavable design and is compatible with all other Bürkert diaphragm valves. An explosion-proof ATEX/IECEX device variant is available.

The diaphragm bonnet and the handwheel are optionally available in plastic or stainless steel and are equipped with an integrated optical position indicator. The manual actuator can be optionally equipped with a stroke limiter, sensors for position feedback and a locking function.

## Table of contents

<b>1. General technical data</b>	<b>3</b>
<hr/>	
<b>2. Approvals and conformities</b>	<b>4</b>
2.1. General notes .....	4
2.2. Conformity .....	4
2.3. Standards .....	4
2.4. Explosion protection.....	4
2.5. Foods and beverages/Hygiene .....	4
2.6. Others .....	5
<hr/>	
<b>3. Materials</b>	<b>5</b>
3.1. Bürkert resistApp .....	5
3.2. Material specifications .....	5
3.3. Example of available membrane materials.....	6
<hr/>	
<b>4. Dimensions</b>	<b>6</b>
4.1. Actuator .....	6
Handwheel .....	6
4.2. T-Body with welded connection .....	7
4.3. T-Body with clamp connection .....	11
<hr/>	
<b>5. Performance specifications</b>	<b>12</b>
5.1. Medium pressure .....	12
<hr/>	
<b>6. Ordering information</b>	<b>12</b>
6.1. Bürkert eShop .....	12
6.2. Bürkert product filter .....	12
6.3. Bürkert Product Enquiry Form .....	12

DTS 1000450619 EN Version: H Status: RL (released | freigegeben | validé) printed: 18.12.2024

## 1. General technical data

Product properties	
Dimensions	Further information can be found in chapter "4. Dimensions" on page 6.
<b>Material<sup>1)</sup></b>	
Block body (VH) <sup>1)</sup>	Bloc material 1.4435 according to DIN EN 10088 and 316L according to ASTM A479 / A479M
Block body (VI) <sup>1)</sup>	Bloc material 1.4435 according to BN2 and 316L according to ASME BPE table DT- 3
Diaphragm	EPDM (AD) <sup>1)</sup> , PTFE/EPDM (EA) <sup>1)</sup> , Advanced PTFE/EPDM (EU) <sup>1)</sup> , laminate of GYLON® and EPDM (ER) <sup>1)</sup>
Actuator (diaphragm bonnet/ handwheel) Diaphragm size 8...50	PPS/PPS (stainless steel/PPS or stainless steel/stainless steel)
Actuator (diaphragm bonnet/ handwheel) Diaphragm size 65...100	Stainless steel/stainless steel
Diaphragm size	8...100
<b>Standard surface quality<sup>2)</sup></b>	
Block body (VH/VI) <sup>1)</sup>	Internally electrically polished: Ra ≤ 0.38 µm (NO17) <sup>1)</sup> (ASME BPE SF4 / DIN HE4) (externally Ra ≤ 1.6 µm) Internally mechanically polished: Ra ≤ 0.5 µm (NO14) <sup>1)</sup> (ASME BPE SF1) (externally Ra ≤ 1.6 µm)
Medium data	
Process medium	Neutral gases and fluids, highly purified, sterile, aggressive or abrasive mediums (see <b>resistance chart</b> ▶)
<b>Medium temperature</b>	
EPDM (AD) <sup>1)</sup>	- 10...+ 143 °C (steam sterilisation + 150 °C for 60 min)
PTFE/EPDM (EA) <sup>1)</sup>	- 10...+ 130 °C (steam sterilisation + 140 °C for 60 min)
Advanced PTFE/EPDM (EU) <sup>1)</sup>	- 5...+ 143 °C (steam sterilisation + 150 °C for 60 min)
Laminate of GYLON® and EPDM (ER) <sup>1)</sup>	- 5...+ 130 °C (steam sterilisation + 140 °C for 60 min)
Process/Port connection & communication	
Nominal diameter (port connection)	DN 06...DN 100 (1/8"... 4")
<b>Port connection for stainless steel body<sup>2)</sup></b>	
Welded connection <sup>2)</sup>	DIN EN ISO 1127 / ISO 4200 / DIN 11866 series B DIN 11850 - 2 / DIN 11866 series A / DIN EN 10357 series A ASME BPE / DIN 11866 series C
Clamp connection <sup>2)</sup>	DIN 32676 series A (DIN pipe) DIN 32676 series B (ISO pipe) ASME BPE
Environment and installation	
Installation position	See <b>operating manual Type 3234</b> ▶
<b>Ambient temperature: actuator (diaphragm bonnet/handwheel)<sup>3)</sup></b>	
PPS/PPS	0...+ 130 °C (short-term up to + 150 °C)
Stainless steel/PPS	0...+ 130 °C (short-term up to + 150 °C)
Stainless steel/stainless steel	- 10...+ 140 °C (short-term up to + 150 °C)

1.) This information is part of the product key (see "6.3. Bürkert Product Enquiry Form" on page 12).

2.) Further variants are available on request.

3.) With plastic housings, a temperature limitation due to housing material is possible.

## 2. Approvals and conformities

### 2.1. General notes

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available versions can be supplied with the below mentioned approvals or conformities.



### 2.2. Conformity

In accordance with the Declaration of Conformity, the product is compliant with the EU Directives.



### 2.3. Standards

The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

### 2.4. Explosion protection

Approval	Description																
 	<p><b>Optional: Explosion protection (valid for the variable code PX51)</b> As a category 2 device suitable for zone 1/21 and zone 2/22.</p> <p><b>ATEX:</b> EPS 18 ATEX 2 008 X II 2G Ex h IIC T4...T2 Gb II 2D Ex h IIC T135 °C...T300 °C Db</p> <p><b>IECEX:</b> IECEX EPS 18.0007X Ex h IIC T4...T2 Gb Ex h IIC T135 °C...T300 °C Db</p> <table border="1"> <thead> <tr> <th>Temperature class</th> <th>T2</th> <th>T3</th> <th>T4</th> </tr> </thead> <tbody> <tr> <td>Permissible surface temperature</td> <td>+ 300 °C</td> <td>+ 200 °C</td> <td>+ 135 °C</td> </tr> <tr> <td>Ambient temperature</td> <td>- 40...+ 130 °C</td> <td>- 40...+ 130 °C</td> <td>- 40...+ 100 °C</td> </tr> <tr> <td>Maximum medium temperature</td> <td>+ 285 °C</td> <td>+ 185 °C</td> <td>+ 125 °C</td> </tr> </tbody> </table>	Temperature class	T2	T3	T4	Permissible surface temperature	+ 300 °C	+ 200 °C	+ 135 °C	Ambient temperature	- 40...+ 130 °C	- 40...+ 130 °C	- 40...+ 100 °C	Maximum medium temperature	+ 285 °C	+ 185 °C	+ 125 °C
Temperature class	T2	T3	T4														
Permissible surface temperature	+ 300 °C	+ 200 °C	+ 135 °C														
Ambient temperature	- 40...+ 130 °C	- 40...+ 130 °C	- 40...+ 100 °C														
Maximum medium temperature	+ 285 °C	+ 185 °C	+ 125 °C														

### 2.5. Foods and beverages/Hygiene


Conformity	Description
	<p><b>3-A Sanitary Standards Inc. (valid for the variable code PE05)</b> The products comply with 3-A Sanitary Standards Inc (3-A SSI) as per certificate.</p>
FDA	<p><b>FDA – Code of Federal Regulations</b> The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) comply with the Code of Federal Regulations published by the FDA (Food and Drug Administration, USA).</p>
USP	<p><b>United States Pharmacopeial Convention (USP)</b> The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) are tested according to USP Class VI.</p>
	<p><b>EC Regulation 1935/2004 of the European Parliament and of the Council</b> The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) are suitable for use with food and beverages (according to EC Regulation 1935/2004/EC).</p>

2.6. Others

Conformity	Description
TA Luft	Technical instruction on air quality control (valid for the variable code PM01)

3. Materials

3.1. Bürkert resistApp

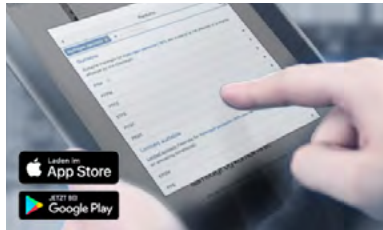

**Bürkert resistApp – Chemical resistance chart**


You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.

[Start chemical resistance check](#)

3.2. Material specifications

**Note:**

Your product variant may differ from this illustration depending on the housing and interface options.

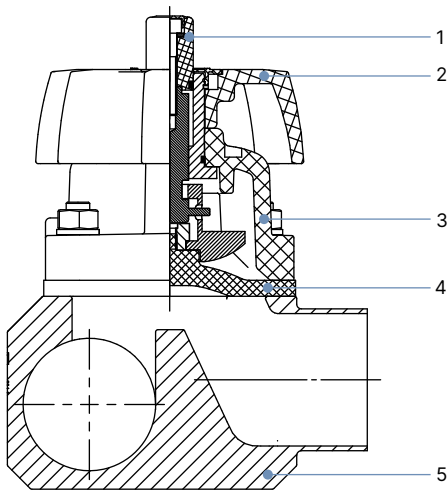

No.	Element	Material
1	Optical position indicator	Diaphragm size 15...50: polyoxymethylene Diaphragm size 65...100: stainless steel
2	Handwheel	Diaphragm size 8...50: polyphenylene sulphide PPS (stainless steel on request) Diaphragm size 65...100: stainless steel
3	Diaphragm bonnet/ handwheel	Diaphragm size 8...50: polyphenylene sulphide PPS (stainless steel on request) Diaphragm size 65...100: stainless steel
4	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)
5	Valve body	See "1. General technical data" on page 3

### 3.3. Example of available membrane materials

The diaphragms have been developed to meet the unique challenges of hygienic and sterile requirements. Bürkert offers diaphragms with precise material composition and high accuracy. Bürkert diaphragms are available in a wide range of materials which have been tested and proven in applications in the food and beverage, biotechnology, pharmaceutical and cosmetics industries. The diaphragms are tested during development and production to ensure reliability under difficult process conditions.



- EPDM (AD)
- PTFE/EPDM (EA)
- Advanced PTFE/EPDM (EU)
- Laminate of GYLON® and EPDM (ER)

For further information please refer to our flyer “Diaphragm competence for hygienic applications” on our [website](#) ▶.


## 4. Dimensions

### 4.1. Actuator

#### Handwheel

**Note:**

Dimensions in mm

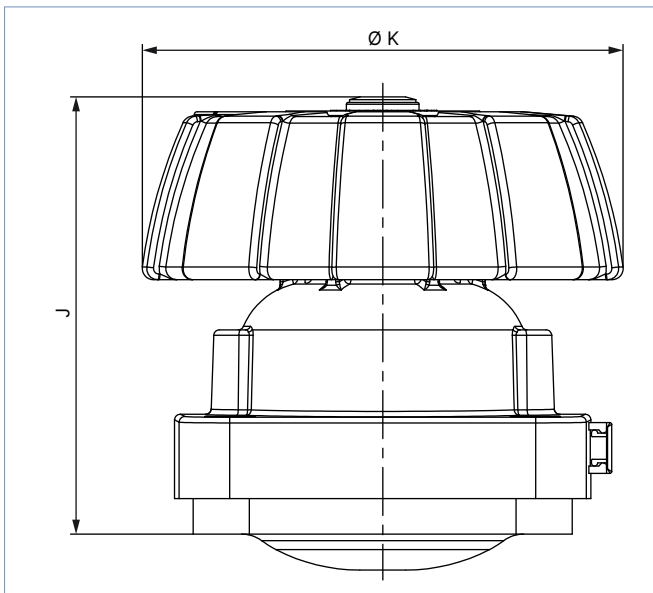


Diaphragm size	ØK	J
8	35	48
15	85	74
20	86	82
25	86	78
32	114	101
40	114	100
50	114	117
65	272	188
80	272	196
100	272	207

4.2. T-Body with welded connection

Note:

Dimensions in mm

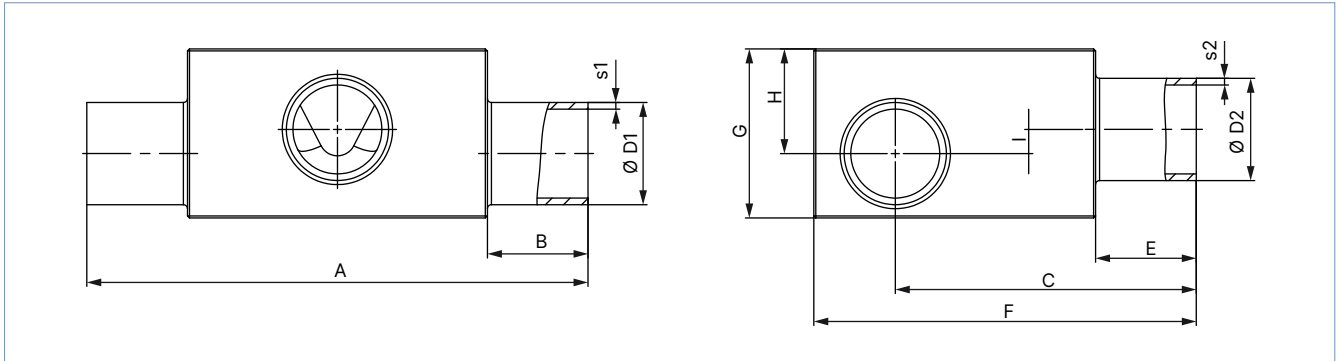

Diaphragm size	Port 1 – Port 2 DN	Ø D1	s1	Ø D2	s2	A	B	C	E	F	G	H	I	Product key <sup>1)</sup> (Port 1 – Port 2)				
<b>DIN EN ISO 1127 / ISO 4200 / DIN 11866 series B</b>																		
8	8...8	13.5	1.6	13.5	1.6	78.0	20	47.2	20	60	24	15	5.0	SA40-SA40				
	10...8	17.2		13.5		78.0		49.00		60	29	18	8.0	SA41-SA40				
	10...10	17.2		17.2		78.0		49.00		60	29	18	8.0	SA41-SA41				
	15...8	21.3		13.5		78.0		51.1		64	34	21	11.0	SA42-SA40				
	15...10	21.3		17.2		78.0		51.1		64	34	21	11.0	SA42-SA41				
	20...8	26.9		13.5		88.0		25		53.9	70	38	23	13.0	SA43-SA40			
	20...10	26.9		17.2		88.0				53.9	70	38	23	13.0	SA43-SA41			
	25...8	33.7		2.0		13.5		2.0		88.0	25	53.9	25	76	45	26	16.0	SA44-SA40
	25...10	33.7				17.2				88.0		53.9		76	45	26	16.0	SA44-SA41
	32...8	42.4				13.5				88.0		60.50		84	52	29	19.0	SA45-SA40
	32...10	42.4	17.2		88.0	61.20	84		52	29		19.0		SA45-SA41				
	40...8	48.3	13.5		88.0	64.2	90		57	31		21.0		SA46-SA40				
	40...10	48.3	17.2		88.0	64.2	90		57	31		20.0		SA46-SA41				
	50...8	60.3	13.5		98.0	30	70.2		102	66		34		24.0	SA47-SA40			
	50...10	60.3	17.2		98.0		70.2		102	66		34		24.0	SA47-SA41			
	65...8	76.1	13.5		98.0	78.1	118		80	40		30.0		SA48-SA40				
	80...8	88.9	2.3		13.5	2.3	98.0		30	84.2		30		131	92	46	36.0	SA49-SA40
	80...10	88.9		17.2	98.0		84.2	131		92	46		35.0	SA49-SA41				

DTS 1000450619 EN Version: H Status: RL (released | freigegeben | valide) printed: 18.12.2024

Diaphragm size	Port 1 – Port 2 DN	ØD1	s1	ØD2	s2	A	B	C	E	F	G	H	I	Product key <sup>1)</sup> (Port 1 – Port 2)				
15	8...8	13.5	1.6	13.5	1.6	93.0	20	52.05	20	70	27	17	4.5	SA40-SA40				
	10...8	17.2		13.5		93.0		53.9		70	31	18	4.5	SA41-SA40				
	10...10	17.2		17.2		93.0		54.9		70	28	16	2.5	SA41-SA41				
	15...8	21.3		13.5		93.0		57		71	34.5	21	7.5	SA42-SA40				
	15...15	21.3		21.3		93.0		56		71	35	21	6.5	SA42-SA42				
	20...8	26.9		13.5		103.0		25		59.8	76	41	25	11.5	SA43-SA40			
	20...10	26.9		17.2		103.0				59.8	78	42	25	11.5	SA43-SA41			
	20...15	26.9		21.3		103.0				59.8	78	42	25	11.5	SA43-SA42			
	25...10	33.7		2.0		17.2				103.0	63	83	48	28	14.5	SA44-SA41		
	25...15	33.7				21.3				103.0	62.8	83	47	28	14.5	SA44-SA42		
	32...8	42.4	13.5		103.0	67.1	91		56	32	18.5	SA45-SA40						
	32...10	42.4	17.2		103.0	67.1	91	56	32	18.5	SA45-SA41							
	32...15	42.4	21.3		103.0	67.1	91	56	32	18.5	SA45-SA42							
	40...8	48.3	13.5		103.0	70.1	97	63	35	21.5	SA46-SA40							
	40...10	48.3	17.2	103.0	70.1	97	63	35	21.5	SA46-SA41								
	40...15	48.3	21.3	103.0	70.1	97	63	35	21.5	SA46-SA42								
	50...8	60.3	13.5	113.0	30	76.1	109	72	38	24.5	SA47-SA40							
	50...10	60.3	17.2	113.0		76.1	109	72	38	24.5	SA47-SA41							
	50...15	60.3	21.3	113.0		76.1	109	72	38	24.5	SA47-SA42							
	65...8	76.1	13.5	113.0		84	125	85	44	30.5	SA48-SA40							
	65...15	76.1	21.3	113.0		84	125	85	44	30.5	SA48-SA42							
	80...8	88.9	2.3	13.5		113.0	90.1	140	99	52	38.5	SA49-SA40						
	80...10	88.9		17.2	113.0	90.1	137	94	47	33.5	SA49-SA41							
	80...15	88.9		21.3	113.0	90.1	137	94	47	33.5	SA49-SA42							
	100...15	114.3		21.3	113.0	102.8	163	120	60	46.5	SA39-SA42							
	20	20...20		26.9	1.6	26.9	1.6	114.0	25	70.3	25	87	40	24	6.0	SA43-SA43		
		25...20		33.7	2.0	26.9		114.0		73.3		94	48	28	10.0	SA44-SA43		
		32...20	42.4	26.9		114.0		78.6		102		57	33	15.0	SA45-SA43			
		40...20	48.3	26.9	114.0	80.6		108		63		35	17.0	SA46-SA43				
		50...20	60.3	26.9	124.0	30		87		120.8		72	39	21.0	SA47-SA43			
65...20		76.1	26.9	124.0	94.5			136		86		45	27.0	SA48-SA43				
80...20		88.9	2.3	26.9	124.0	100.6		148		94		47	29.0	SA49-SA43				
100...20		114.3		26.9	124.0	113.3		173		120		60	42.0	SA39-SA43				
25		25...25	33.7	2.0	33.7	2.0		124.5		25		78.6	25	98	53	33	13.0	SA44-SA44
		32...25	42.4		33.7			124.5				82.9		107	62	38	18.0	SA45-SA44
	40...25	48.3	33.7		124.5		85.9	114	69		41	21.0		SA46-SA44				
	50...25	60.3	33.7		134.5		30	81.9	125		78	45		25.0	SA47-SA44			
	65...25	76.1	33.7		134.5			99.8	142		94	52		32.0	SA48-SA44			
	80...25	88.9	2.3		33.7		134.5	105.9	153		101	54		34.0	SA49-SA44			
	150...25	168.3			2.6		33.7	134.5	145.3		232	174		87	67.0	SA69-SA44		
	40	32...32	42.4		2.0		42.4	2.0	152.0		25	98.00		25	122	62	38	9.4
40...32		48.3	42.4	152.0		100	128		68	41		12.4	SA46-SA45					
40...40		48.3	48.3	152.0		100	128		68	41		12.4	SA46-SA46					
50...32		60.3	42.4	162.0		30	106		140	82		48	19.4		SA47-SA45			
50...40		60.3	48.3	162.0			106		140	82		48	19.4		SA47-SA46			
65...40		76.1	48.3	162.0		113.9	155		97	55		26.4	SA48-SA46					
80...32		88.9	2.3	42.4		162.0	120		168	108		60	31.4		SA49-SA45			
80...40		88.9		48.3		162.0	120		168	108		60	31.4		SA49-SA46			
100...32		114.3		42.4		162.0	132.7		193	129		68	39.4		SA39-SA45			
100...40		114.3		48.3		162.0	132.7		193	129		68	39.4		SA39-SA46			
50		50...50		60.3		2.0	60.3		2.0	188.0		30	120.2		30	154	82	48
	65...50	76.1	60.3	188.0	128.1		170	100		56	20.5		SA48-SA47					
	80...50	88.9	2.3	60.3	188.0		134.2	183		110	61		25.5	SA49-SA47				
	100...50	114.3		60.3	188.0		146.9	208		131	70		34.5	SA39-SA47				
	150...50	168.3	2.6	60.3	188.0		173.6	261		176	88		52.5	SA69-SA47				

DTS 1000450619 EN Version: H Status: RL (released | freigegeben | valide) printed: 18.12.2024



Diaphragm size	Port 1 – Port 2 DN	ØD1	s1	ØD2	s2	A	B	C	E	F	G	H	I	Product key <sup>1)</sup> (Port 1 – Port 2)
65	65...65	76.1	2.0	76.1	2.0	210.0	30	144.4	30	186	97	55	12.9	SA48-SA48
	80...65	88.9	2.3	76.1		210.0		148.7		197	111	63	20.5	SA49-SA48
	100...65	114.3		76.1		210.0		161.4		222	135	74	31.5	SA39-SA48
80	80...80	88.9	2.3	88.9	2.3	255.0	30	163.1	30	212	119	71	20.0	SA49-SA49
	100...80	114.3		88.9		255.0		177.8		239	144	83	32.0	SA39-SA49
100	100	114.3	2.3	114.3	2.3	290.0	30	209.1	30	270	133	72	8.5	SA39-SA39
<b>DIN 11850 - 2 / DIN 11866 series A / DIN EN 10357 series A</b>														
8	10...10	13.0	1.5	13.0	1.5	78.0	20	47.0	20	60	24	15	5.0	SD40-SD40
	20...10	23.0		13.0		88.0	25	52.0		66	36	22	12.0	SD43-SD40
15	15...15	19.0	1.5	19.0	1.5	93.0	20	55.9	20	70	33	20	6.5	SD42-SD42
	20...15	23.0		19.0		103.0		57.9		72	37	22.5	9	SD43-SD42
	25...15	29.0		19.0		103.0	25	60.9		78	43	26	12.5	SD44-SD42
	32...15	35.0		19.0		103.0		63.9		84	49	29	15.5	SD45-SD42
	40...15	41.0		19.0		103.0		66.9		91	56	31	17.5	SD46-SD42
	50...15	53.0		19.0		113.0	30	72.9		102	65	36	22.5	SD47-SD42
20	20...20	23.0	1.5	23.0	1.5	114.0	25	68.7	25	85	36	21	–	SD43-SD43
	32...20	35.0		23.0		114.0		74.4		95	50	29	11.0	SD45-SD43
	40...20	41.0		23.0		114.0		77.4		101	56	32	14.0	SD46-SD43
25	25...25	29.0	1.5	29.0	1.5	124.5	25	76.7	25	98	48	30	10.0	SD44-SD44
	40...25	41.0		29.0		124.5		82.7		106	61	38	18.0	SD46-SD44
	50...25	53.0		29.0		134.5	30	88.7		120	73	44	24.0	SD47-SD44
40	32...32	35.0	1.5	35.0	1.5	152.0	25	95	25	119	52	32	9	SD45-SD45
	40...40	41.0		41.0		152.0		97.3		121	62	37	8.4	SD46-SD46
	50...40	53.0		41.0		162.0	30	102.8		133	75	45	16.4	SD47-SD46
50	50...50	53.0	1.5	53.0	1.5	188.0	30	117.0	30	147	74	44	8.5	SD47-SD47
65	65...65	70.0	2.0	70.0	2.0	210.0	30	142.0	30	179	89	52	14.0	SD48-SD48
	80...65	85.0		70.0		210.0		149.5		194	104	59.5	21.5	SD49-SD48
	100...65	104.0		70.0		210.0		–		–	–	–	–	SD50-SD48
80	80...80	85.0	2.0	85.0	2.0	255.0	30	45.0	30	208	112	67	22.0	SD49-SD49
	100...80	104.0		85.0		250.0		172.1		227	132	77	32.0	SD50-SD49
100	100	104.0	2.0	104.0	2.0	293.0	30	211.5	30	267	125	70	11.0	SD50-SD50
<b>ASME BPE / DIN 11866 series C</b>														
8	20...8	19.05	1.65	6.35	0.89	88.0	25	49.90	20	61	32	20	10.0	SA93-SA90
	25...10	25.40		9.53		88.0	25	53.00		68	38	23	13.0	SODF-SA91
	40...8	38.10		6.35		88.0	25	59.40		80	49	28	18.0	SODH-SA90
	50...8	50.80		6.35		98.0	30	65.80		93	59	32	22.0	SODI-SA90
	65...8	63.50		6.35		98.0		72.10		106	70	36	26.0	SODJ-SA90
15	15...15	12.70	1.65	12.70	1.65	93.0	20	53.20	20	70	27	13.5	–	SA92-SA92
	20...15	19.05		12.70		103.0		55.80		70	31	18.5	5.0	SA93-SA92
	25...15	25.40		12.70		103.0		59.00		75	40	24	10.5	SODF-SA92
	40...15	38.10		12.70		103.0	25	65.30		88	54	31	17.5	SODH-SA92
	50...15	50.80		12.70		113.0	30	71.70		100	64	35	21.5	SODI-SA92
	65...15	63.50		12.70		113.0		78.00		113	73	38	24.5	SODJ-SA92
	80...15	76.20		12.70		113.0		84.40		125	84	43	29.5	SODK-SA92
20	20...20	19.05	1.65	19.05	1.65	114	25	66.30	25	85	36	18	–	SA93-SA93
	25...20	25.40		19.05		114		69.20		88	40	24	6.0	SODF-SA93
	40...20	38.10		19.05		114		75.80		98	53	31	13.0	SODH-SA93
	50...20	50.80		19.05		124	30	82.20		111	66	37	19.0	SODI-SA93
	65...20	63.50		19.05		124		88.50		123	75	40	22.0	SODJ-SA93
	80...20	76.20		19.05		124		94.90		136	85	44	26.0	SODK-SA93
	100...20	101.60	2.11	19.05		124		107.10		161	108	54	36.0	SODL-SA93

DTS 1000450619 EN Version: H Status: RL (released | freigegeben | validé) printed: 18.12.2024


Diaphragm size	Port 1 – Port 2 DN	ØD1	s1	ØD2	s2	A	B	C	E	F	G	H	I	Product key <sup>1)</sup> (Port 1 – Port 2)	
25	25...25	25.40	1.65	25.40	1.65	124.5	25	74.8	25	95	42	26	6.0	SODF-SODF	
	40...25	38.10		25.40		124.5		30		81.1	103	58	36	16.0	SODH-SODF
	50...25	50.80		25.40		134.5	87.5			120	75	44	24.0	SODI-SODF	
	65...25	63.50		25.40		134.5	93.8			129	82	47	27.0	SODJ-SODF	
	80...25	76.20		25.40		134.5	100.15	142		94	52	32.0	SODK-SODF		
40	40...40	38.10	1.65	38.10	1.65	152.0	25	99.60	25	121	58	35	6.4	SODH-SODH	
	50...40	50.80		38.10		162.0		30		101.6	131	72	43	14.4	SODI-SODH
	65...40	63.50		38.10		162.0	107.90			143	85	50	21.4	SODJ-SODH	
	80...40	76.20		38.10		162.0	114.3			156	98	56	27.4	SODK-SODH	
50	50...50	50.80	1.65	50.80	1.65	188.0	30	115.8	30	145	71	42	6.5	SODI-SODI	
	65...50	63.50		50.80		188.0		122.10		157	85	50	14.5	SODJ-SODI	
	65...65	63.50		63.50		188.0	122.10	158		86	50	14.5	SODJ-SODJ		
	80...50	76.20		50.80		188.0	128.5	169		98	56	20.5	SODK-SODI		
	100...65	101.60		2.11		63.50	188.0	140.7		195	120	66	30.5	SODL-SODJ	
65	65...65	63.50	1.65	63.50	1.65	210.0	30	136.6	30	172	84	49	6.5	SODJ-SODJ	
	80...65	76.2		63.50		210.0		145.0		187	99	57	14.5	SODK-SODJ	
	100...65	101.6	2.11	63.50	210.0	155.2		210		120	66	23.5	SODL-SODJ		
80	80...80	76.2	1.65	76.2	1.65	255.0	30	157.35	30	199	106	64	6.0	SODK-SODK	
	100...80	101.6		2.11		76.2		255.0		169.6	224	131	77	26.0	SODL-SODK
100	100	101.6	2.11	101.6	2.11	290.0	30	207.0	30	260	120	67	10.0	SODL-SODL	
<b>SMS 3008</b>															
25	25...25	25.0	1.2	25.0	1.2	124.5	25	75.0	25	95	43	27	7.0	SA60-SA60	
	40...25	38.0		25.0		124.5		81.5		103	58	36	16.0	SA62-SA60	
	50...25	51.0		25.0		134.5	88.0	118		72	42	22.0	SA63-SA60		
40	40...40	38.0	1.2	38.0	1.2	152.0	25	95.6	25	121	58	35	6.4	SA62-SA62	
	50...40	51.0		38.0		162.0		102.1		131	73	44	15.4	SA63-SA62	
50	50...50	51.0	1.2	51.0	1.2	188.0	30	120.2	30	154	82	48	2.5	SA63-SA63	
<b>DIN 11850 - 0</b>															
8	04...04	6.0	1.0	6.0	1.0	78.0	20	44.0	20	60	15	6.5	0.0	SC40-SC40	
	06...06	8.0		6.0		75.0		17.5		46.5	60	13	7	0.0	SC41-SC41
	40...04	40.0		1.5		6.0	88.0	25		60.5	83	51	29	19.0	SC47-SC40
	40...8	40.0				10.0	88.0			60.5	83	51	29	19.0	SC47-SC42
	50...04	52.0				6.0	98.0			30	66.5	95	60	32	22.0
15	50...15	52.0	1.5	18.0	1.5	113.0	30	72.4	20	101	65	36	22.5	SC48-SC43	
25	25...25	28.0	1.5	28.0	1.5	124.5	25	76.2	25	95	46	29	9.0	SC45-SC45	
	50...25	52.0		28.0		134.5		30		91.2	120	71	42	22.0	SC48-SC45
40	25...32	28.0	1.5	34.0	1.5	152.0	25	90.3	25	122	58	32	3.4	SC45-SC46	
	50...32	52.0		34.0		162.0		30		102.3	132	75	45	16.4	SC48-SC46
50	50...50	52.0	1.5	52.0	1.5	188.0	30	116.5	30	147	73	43	7.5	SC48-SC48	
65	65...65	70.0	2.0	70.0	2.0	210.0	30	142.0	30	179	89	52	14.0	SD48-SD48	
	80...65	85.0		70.0		210.0		149.5		194	104	59.5	21.5	SD49-SD48	
	100...65	104.0		70.0		210.0		-		-	-	-	-	SD50-SD48	
80	80...80	85.0	2.0	85.0	2.0	255.0	30	45.0	30	208	112	67	22.0	SD49-SD49	
	100...80	104.0		85.0		250.0		172.1		227	132	77	32.0	SD50-SD49	
100	100	104.0	2.0	104.0	2.0	293.0	30	211.5	30	267	125	70	11.0	SD50-SD50	

1.) This information is part of the product key (see "6.3. Bürkert Product Enquiry Form" on page 12).

### 4.3. T-Body with clamp connection

**Note:**

The clamp dimensions must be added to the welded connection dimensions.

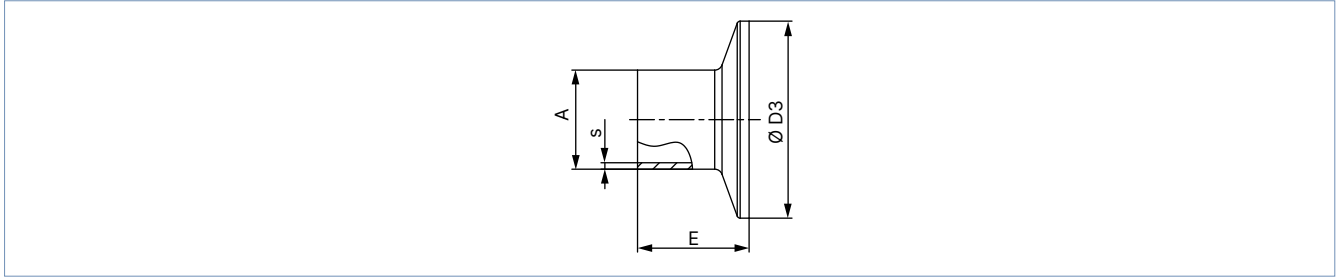

Port connection		A	s	D3	E	Product key <sup>1)</sup>
[mm]	[inch]					
<b>DIN 32676 series A (DIN pipe)</b>						
10	–	18	1.5	34.0	18.0	TD41
15	–	19	1.5	34.0	18.0	TD42
20	–	23	1.5	34.0	18.0	TD43
25	–	29	1.5	50.5	21.5	TD44
32	–	35	1.5	50.5	21.5	TD45
40	–	41	1.5	50.5	21.5	TD46
50	–	53	1.5	64.0	21.5	TD47
65	–	70	2.0	91.0	28.0	TD48
80	–	85	2.0	106.0	28.0	TD49
100	–	104	2.0	119.0	28.0	TD50
<b>DIN 32676 series B (ISO pipe)</b>						
8	–	13.5	1.6	25.0	28.6	TC40
8	–	13.5	1.6	34.0 <sup>2.)</sup>	28.6	TC51 <sup>2.)</sup>
10	–	17.2	1.6	34.0 <sup>2.)</sup>	28.6	TC41 <sup>2.)</sup>
15	–	21.3	1.6	34.0 <sup>2.)</sup>	28.6	TC42 <sup>2.)</sup>
15	–	21.3	1.6	50.5	28.6	TC52
20	–	26.9	1.6	50.5	28.6	TC43
25	–	33.7	2.0	50.5	28.6	TC44
32	–	42.4	2.0	50.5 <sup>2.)</sup>	28.6	TC45 <sup>2.)</sup>
40	–	48.3	2.0	64.0	28.6	TC46
50	–	60.3	2.0	77.5	28.6	TC47
65	–	76.1	2.0	91.0	28.6	TC48
80	–	88.9	2.3	106.0	28.6	TC49
100	–	114.3	2.3	130.0	28.6	TC50
<b>ASME BPE</b>						
8	1/4"	6.35	0.89	25.0	28.6	TG50
10	3/8"	9.53	0.89	25.0	28.6	TG01
15	1/2"	12.7	1.65	25.0	28.6	TG02
20	3/4"	19.05	1.65	25.0	28.6	TG03
25	1"	25.4	1.65	50.5	28.6	TG04
40	1 1/2"	38.1	1.65	50.5	28.6	TG05
50	2"	50.8	1.65	64.0	28.6	TG06
65	2 1/2"	63.5	1.65	77.5	28.6	TG07
80	3"	76.2	1.65	91.0	28.6	TG08
100	4"	101.6	2.11	119.0	28.6	TG09

1.) This information is part of the product key (see "6.3. Bürkert Product Enquiry Form" on page 12).

2.) Deviating from standard because of a different outer clamp diameter


## 5. Performance specifications

### 5.1. Medium pressure

Diaphragm size  DN	Actuator material	Maximum operating pressure for seal material EPD, PTFE/EPDM, advanced PTFE/EPDM, laminated GYLON®/EPDM
		[bar]
8...80	Stainless steel/stainless steel	10
100	Stainless steel/stainless steel	6
8...50	Stainless steel/PPS	10
8...40	PPS/PPS	10
50	PPS/PPS	7

## 6. Ordering information

### 6.1. Bürkert eShop




**Bürkert eShop – Easy ordering and quick delivery**

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

[Order online now](#)

### 6.2. Bürkert product filter



**Bürkert product filter – Get quickly to the right product**


You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

[Try out our product filter](#)

### 6.3. Bürkert Product Enquiry Form

**Note:**

Please see our Product Enquiry Form for a full explanation of our specification key.

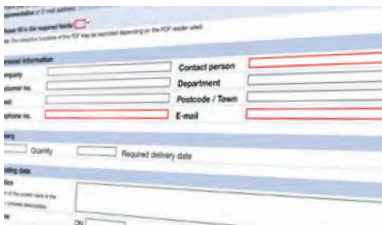

**Bürkert Product Enquiry Form – Your enquiry quickly and compactly**

Would you like to make a specific product enquiry based on your technical requirements? Use our Product Enquiry Form for this purpose. There you will find all the relevant information for your Bürkert contact. This will enable us to provide you with the best possible advice.

[Fill out the form now](#)

DTS 1000450619 EN Version: H Status: RL (released | freigegeben | validé) printed: 18.12.2024