

- Nominal flow ranges from 0.010 l/min to 160 l/min
- High accuracy and repeatability
- Very fast response times
- Simpler device exchange due to configuration memory
- Optional: USP Class VI, FDA, EC 1935 compliant







Product variants described in the data sheet may differ from the product presentation and description.

Can be combined with



Type 6013 Plunger valve 2/2-way direct-acting



Type 6027 Direct-acting 2/2-way plunger valve



Type 0330 Direct-acting 2/2 or 3/2-way pivoted armature



Type ME43 Fieldbus gateway

Type description

The Type 8741 mass flow controller (MFC)/mass flow meter (MFM) for gases is suitable for a variety of applications and is available with industrial Ethernet, analogue or fieldbus interfaces. The variant with CANopen-based Bürkert Systembus (büS) is suitable for integration into existing CANopen networks or - in combination with the Type ME43 fieldbus gateway - for integration into all common industry standards for Industrial Ethernet and/or fieldbus. The latter option is tailor-made for applications with many control loops. Up to 32 MFCs/MFMs can be connected to one fieldbus gateway. Type ME43 transmits the internal CANopen-based communication to Industrial Ethernet and fieldbus standards. The mass flow controller/ mass flow meter can always be switched between büS and CANopen communication. Type 8741 can be configured as an MFM or an MFC according to demand. Furthermore a Modbus RTU version is available as well. Optionally, up to four calibration curves can be stored in the device. The thermal MEMS sensor is located directly in the gas stream and therefore achieves very fast response times. As the actuator, a Bürkert direct-acting proportional valve guarantees high response sensitivity.



Table of contents

1.	Gene	General technical data		
2.	Appr	rovals and conformities	5	
	2.1.	General notes	5	
	2.2.	Conformity		
	2.3.	Standards		
	2.4.	North America (USA/Canada)		
	2.5.	Foods and beverages/Hygiene		
	2.6.	Oxygen		
		- 70		
3.	Mate	erials	6	
	3.1.	Bürkert resistApp	6	
4.	Dime	ensions	6	
	4.1.	Thread depths of base blocks	6	
		MFC/MFM for small nominal flow rates		
		MFC/MFM for large nominal flow rates	6	
	4.2.	Variant with büS/CANopen interface		
		MFC with valve Type 2871	7	
		MFC with valve Type 2873		
		MFC with valve Type 2873	10	
		MFM variant	11	
	4.3.	Variant with analogue or Industrial Ethernet interface	13	
		MFC with valve Type 2871	13	
		MFC with valve Type 2873	14	
		MFC with valve Type 2875	15	
		MFM variant	16	
	4.4.	Modbus RTU variant	17	
5.	Device / Process connections			
	5.1.	büS/CANopen	18	
	5.2.	Industrial Ethernet	18	
	5.3.	Analogue	19	
	5.4.	Modbus RTU	20	
6.	Perf	ormance specifications	20	
	6.1.	MFM pressure loss diagram	20	
	6.2.	Nominal flow range of typical gases		
	O.L.	To mile to the large of typical gacoo		
7.	Prod	duct operation	21	
	7.1.	Measuring principle	21	
8.	Prod	duct accessories	22	
	8.1.	Bürkert Communicator software	22	
	8.2.	Connecting Type 8741 with the Bürkert Communicator software	23	
	8.3.	Configuration management for easy device replacement		
	8.4.	Web server for Industrial Ethernet variant	23	
9.	Orde	ering information	23	
	9.1.	Bürkert eShop	23	
	9.2.	Recommendation regarding product selection		
	9.3.	Bürkert product filter		

Type 8741



20 12 2023
20
printed:
validé)
freigegeben
(released
చ
Status: RL
AD:
Version:
Z H
000222224
DTS 1

9.4.Bürkert Product Enquiry Form249.5.Ordering chart accessories24



1. General technical data

Product properties	
Dimensions	Further information can be found in chapter "4. Dimensions" on page 6.
//aterials	
Seal	FKM or EPDM (depending on gas)
Housing	PC (polycarbonate)
Base block	Aluminium or stainless steel 1.4404/316L
otal weight	Approx. 500 g (aluminium base block)
Configuration management	Further information can be found in chapter "8.3. Configuration management for easy
omiguration management	device replacement" on page 23.
.ED display 1.)	RGB LED according to NAMUR NE107
Performance data	
Nominal flow range (Q _{nom})	10 ml _x /min160 l _x /min (N ₂)
Maximum operating pressure	MFM: 10 bar
overpressure to atmospheric pressure)	For MFCs, the maximum operating pressure depends on the medium and nominal valve size
Measuring accuracy ^{2.)}	$\pm 0.8\%$ of reading $\pm 0.3\%$ FS (under calibration conditions)
Repeatability	±0.1% FS
Measuring span	1:50, optional 1:100
Settling time (MFC)/Response time (MFM) (t _{95%})	<300 ms
Control valve (proportional valve)	Normally closed
/alve orifice	0.058 mm
√ _{vs} value range	0.000061.1 m³/h
Electrical data	
Operating voltage	24 V DC
Power consumption ^{3,)}	13 W (as MFM)
	Max. 319.5 W (as MFC, depending on type of solenoid control valve)
Residual ripple	±2%
oltage tolerance	±10%
Electrical connection	
püS/CANopen variant	Terminal block, 4-pin
Analogue variant	D-Sub 9 ^{4.)} or terminal block, 6-pin
ndustrial Ethernet variant	2 x RJ45 (Switch) ^{5.)}
Modbus RTU variant	D-Sub, 9-pin
Medium data	
Operating medium	Neutral, pure gases (others on request)
Calibration medium	Operating medium or air
Medium temperature	-10 °C+70 °C (-10 °C+60 °C with oxygen)
Process/Port connection & communication	, , ,
Analogue interface	420 mA, 020 mA, 010 V or 05 V
	Input impedance > 20 k Ω (voltage) resp. < 300 Ω (current)
	Maximum current: 10 mA (voltage output)
	Maximum load: 600 Ω (current output)
Digital communication interface	büS/CANopen, EtherCAT®, EtherNet/IP, Modbus RS485/RTU list 0 and list 1, Modbus TCP, PROFINET
Port connection	NPT ¼, G ¼, sub-base, compression fitting or vacuum fitting (others on request)
pprovals and conformities	
Protection class	IP20
North America (USA/Canada)	Further information can be found in chapter "2.4. North America (USA/Canada)" on page 5.
coods and beverages/Hygiene	Further information can be found in chapter "2.5. Foods and beverages/Hygiene" on page 5.
Dxygen	Further information can be found in chapter "2.6. Oxygen" on page 6.
Environment and installation	
nstallation position	Horizontal or vertical

Visit product website

4 | 24



Accessories		
Software	Bürkert Communicator Detailed information can be found in chapter "8.1. Bürkert Communicator software" on page 22.	

^{1.)} For a detailed description of LED colours see operating instructions Type 8741 >

- 2.) If the operating medium is different from the calibration medium, the actual measurement accuracy might vary from the indicated value. If the operating medium is natural gas, the measurement accuracy depends on the composition of the natural gas, which can vary depending on the origin and season.
- 3.) Information in relation to the typical power consumption (at +23 °C ambient temperature, nominal flow and 30 min closed-loop control mode). Information according to UL 61010-1 may vary (see operating instructions Type 8741).
- 4.) An additional digital input and a relay output are available for the analogue variant with D-Sub 9.
- 5.) Supply voltage via separate terminal block

2. Approvals and conformities

2.1. General notes

Note:

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available variants can be supplied with the below mentioned approvals or conformities.

2.2. Conformity

In accordance with the Declaration of Conformity, the product is compliant with the EU Directives.

2.3. Standards

The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

2.4. North America (USA/Canada)

	Approvai	Description	
	c (UL) us	Optional: UL Listed for the USA and Canada	
	a(Ui)ua	The products are UL Listed for the USA and Canada according to:	
	U S L JUS	• UL 61010-1 (ELECTRICAL EQUIPMENT FOR MEASUREMENT, CONTROL, AND LABORATORY USE -	
	LISTED	Part 1: General Requirements)	
		• CAN/CSA-C22.2 No. 61010-1	

2.5. Foods and beverages/Hygiene

Conformity	Description
FDA	FDA – Code of Federal Regulations (valid for variable code PL02, PL03) All wetted materials are compliant with the Code of Federal Regulations published by the FDA (Food and Drug Administration, USA) according to the manufacturer's declaration.
USP	United States Pharmacopeial Convention (USP) (valid for variable code PL04) All wetted materials are biocompatible according to the manufacturer's declaration.
77	EC Regulation 1935/2004 of the European Parliament and of the Council (valid for variable code PL01, PL02) All wetted materials are compliant with EC Regulation 1935/2004/EC according to the manufacturer's declaration.

Visit product website
5 | 24




2.6. Oxygen

Conformity	Description
02	Optional: Suitability for oxygen (valid for the variable code NL02) The products are suitable for use with gaseous oxygen, according to the manufacturer's declaration.

3. Materials

3.1. Bürkert resistApp

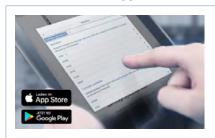

Bürkert resistApp - Chemical Resistance Chart

You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.

Start Chemical Resistance Check

4. Dimensions

4.1. Thread depths of base blocks

MFC/MFM for small nominal flow rates

Note:

The following table applies to base blocks C0...C4.

Thread (A)	Thread depth [mm]
G 1/4	12
NPT 1/4	12
G 1/8	12
NPT 1/8	12

MFC/MFM for large nominal flow rates

Note:

The following table applies to base block C5.

Thread (A)	Thread depth [mm]
G 1/4	12
NPT 1/4	11
G %	12
NPT %	11
G ½	15
NPT ½	14
G ¾	16
NPT ¾	15

Visit product website

6 | 24




4.2. Variant with büS/CANopen interface

MFC with valve Type 2871

Variant with base block C0...C4 for small nominal flow rates


Note:

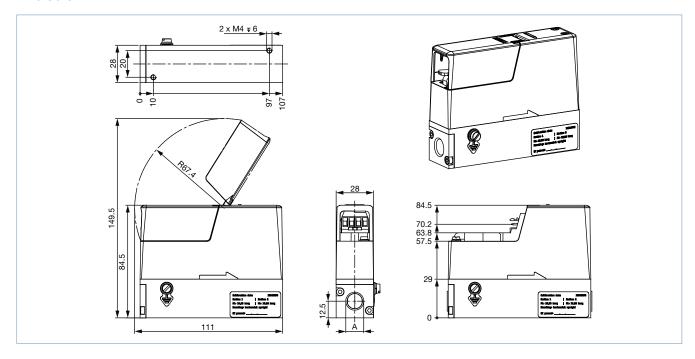



Sub-base variant

Note:

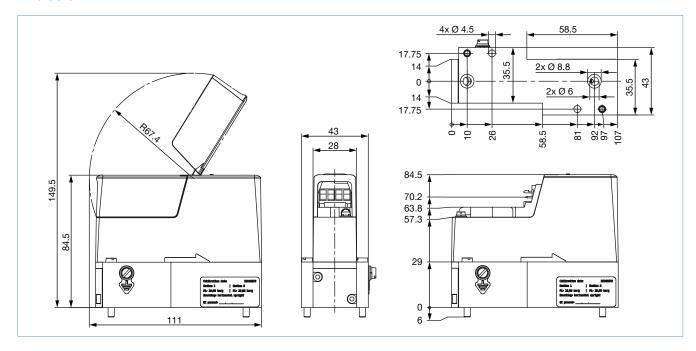




MFC with valve Type 2873

Variant with base block C...C4 for small nominal flow rates

Note:

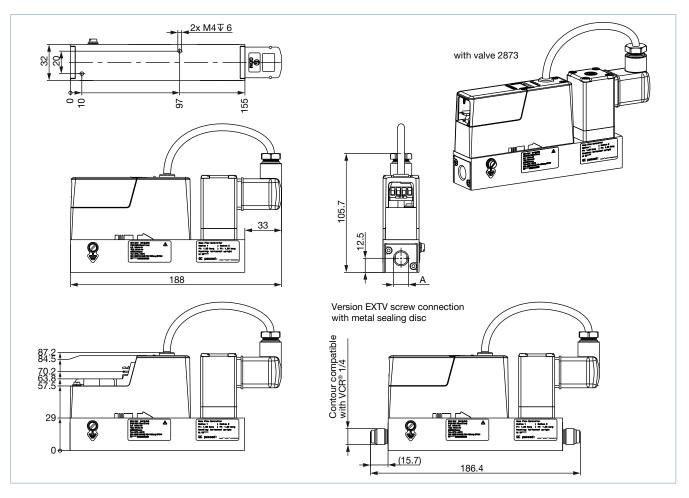




Variant with base block C5 for large nominal flow rates

Note:


Dimensions in mm

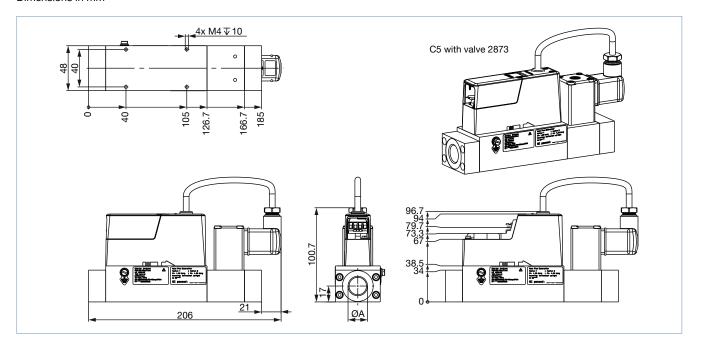

MFC with valve Type 2873

Variant with base block C5 for large nominal flow rates

Note:

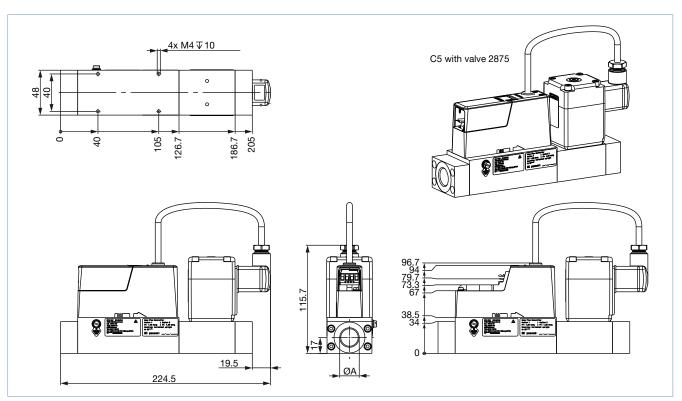


burkert

MFM variant

Variant with base block C...C4 for small nominal flow rates


Note:

Dimensions in mm

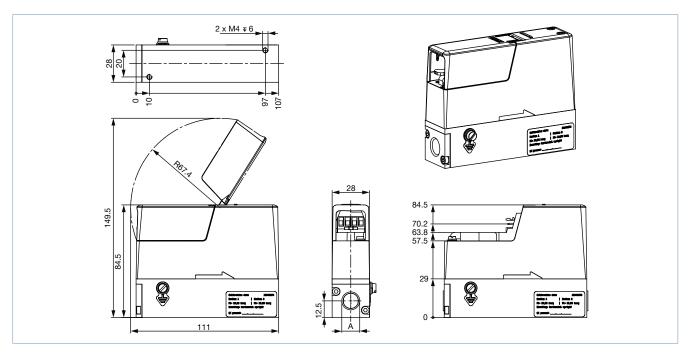

Sub-base variant


Note:

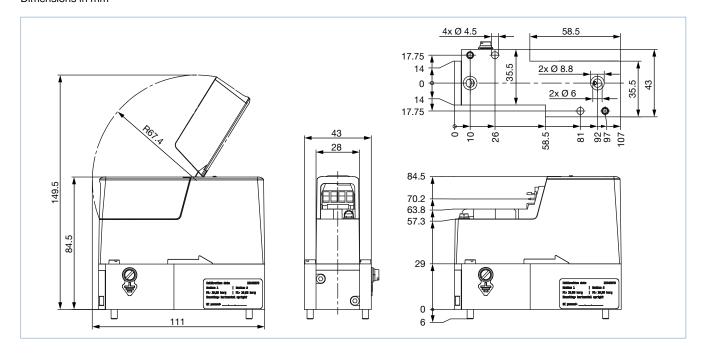



Variant with base block C5 for large nominal flow rates

Note:

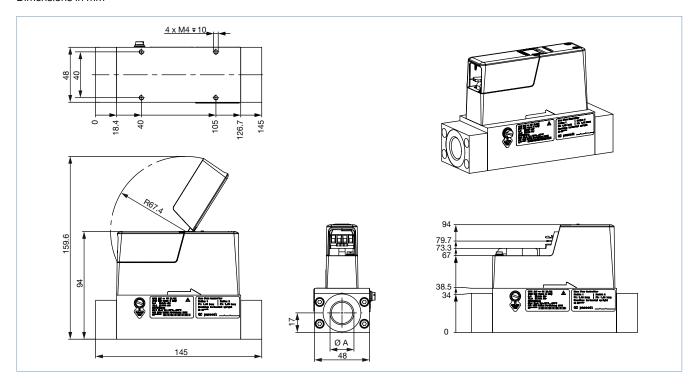




4.3. Variant with analogue or Industrial Ethernet interface

MFC with valve Type 2871

Variant with base block C0...C4 for small nominal flow rates

Note:


Dimensions in mm

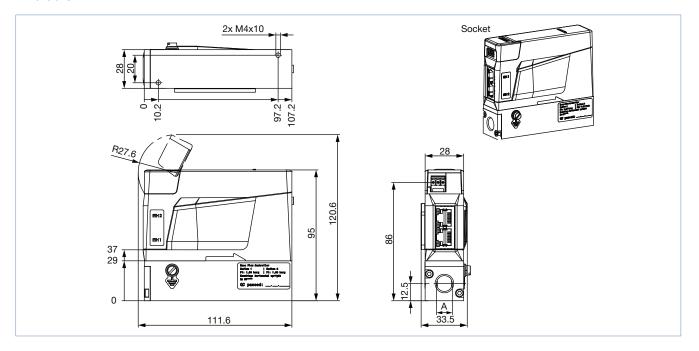

Sub-base variant

Note:

Dimensions in mm

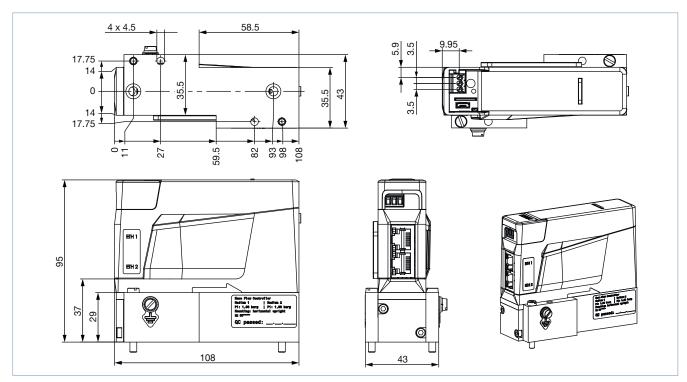

Visit product website


13 | 24



MFC with valve Type 2873

Variant with base block C0...C4 for small nominal flow rates

Note:

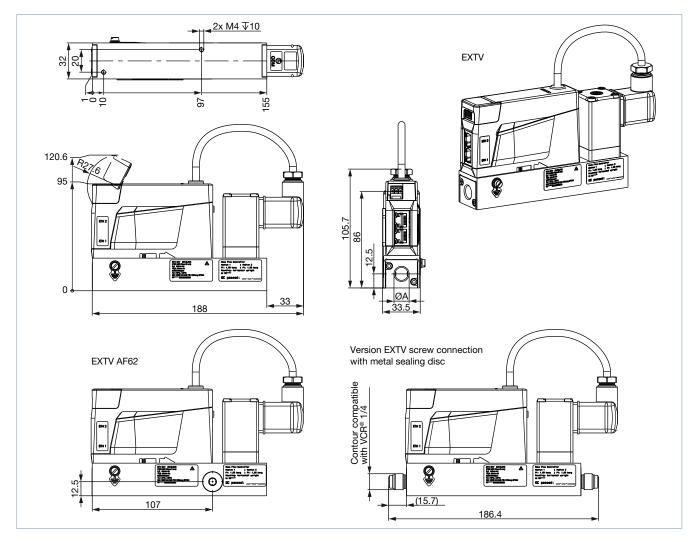




Variant with base block C5 for large nominal flow rates

Note:


Dimensions in mm

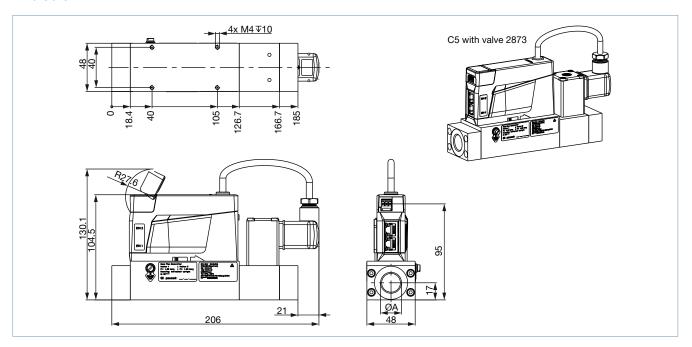

MFC with valve Type 2875

Variant with base block C5 for large nominal flow rates

Note:

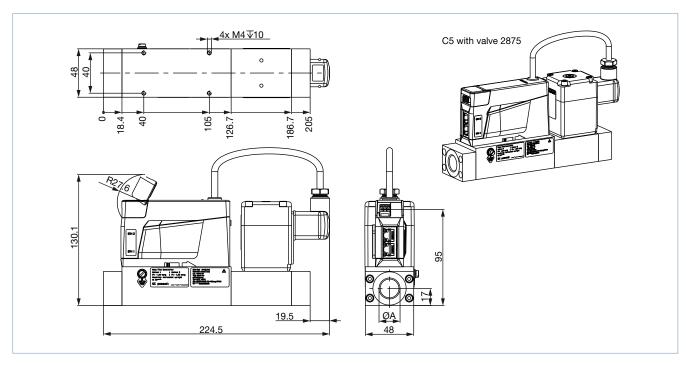




MFM variant

Variant with base block C0...C4 for small nominal flow rates

Note:


Dimensions in mm

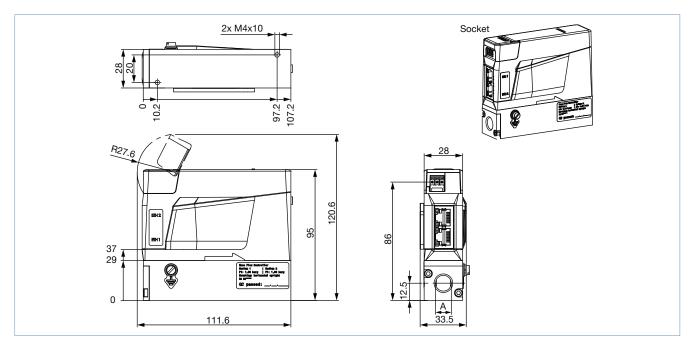

Sub-base variant

Note:

Dimensions in mm

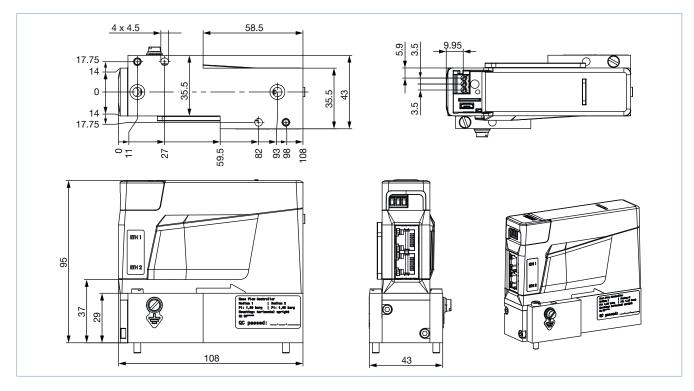

Visit product website


16 | 24



Variant with base block C5 for large nominal flow rates


Note:

Dimensions in mm

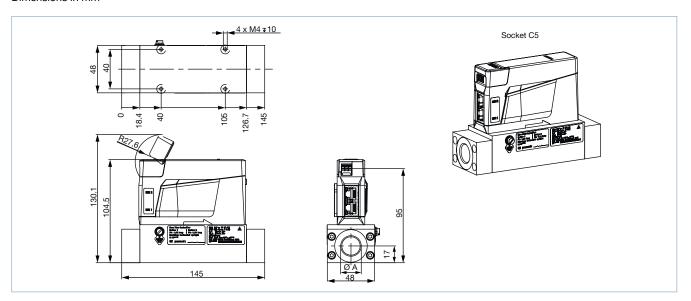

4.4. Modbus RTU variant


Note:

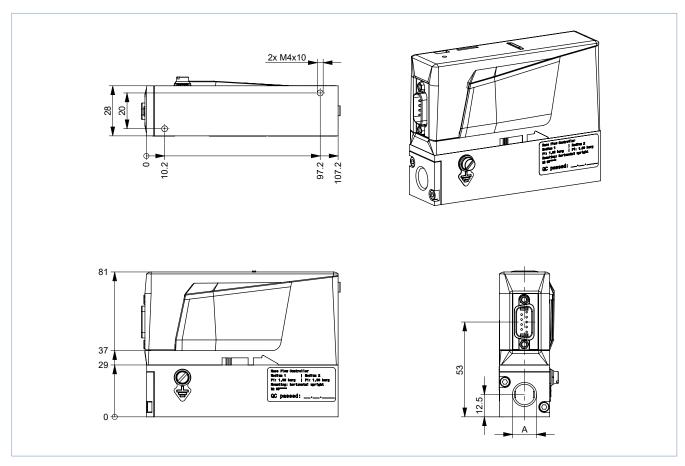



5. Device / Process connections


5.1. büS/CANopen



Terminal block, 4-pin	Pin	Assignment
	1	DGND
	2	CAN_L
	3	CAN_H
1 2 3 4	4	24 V

Screw M3				
Functional earth	When using Bürkert büS cables, the following colour coding applies:			
	• Red: 24 V			
	Blue: CAN_L			
	White: CAN_H			
	Black: GND			

5.2. Industrial Ethernet



Terminal block, 3-pin	Pin	Assignment
	1	FE (functional earth)
	2	DGND
1 2 3	3	24 V


RJ45 socket	Pin	Assignment
_8	1	TX +
	2	TX -
	3	RX +
6	4	Not connected
5	5	Not connected
4	6	RX -
	7	Not connected
	8	Not connected
	Housing	Shielding


Visit product website


18 | 24



5.3. Analogue



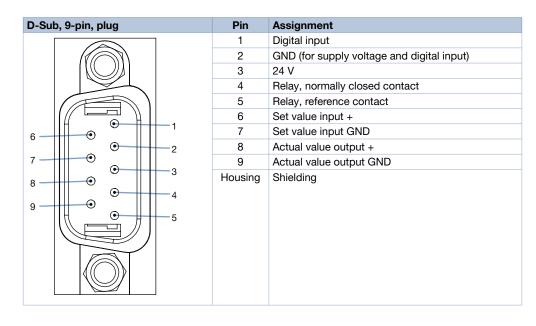




Terminal block, 6-pin	Pin	Assignment
	1	24 V
	2	GND
	3	Set value input +
2	4	Set value input GND
3	5	Actual value output +
	6	Actual value output GND
<u></u>		
→ 6		


Visit product website

19 | 24



5.4. Modbus RTU




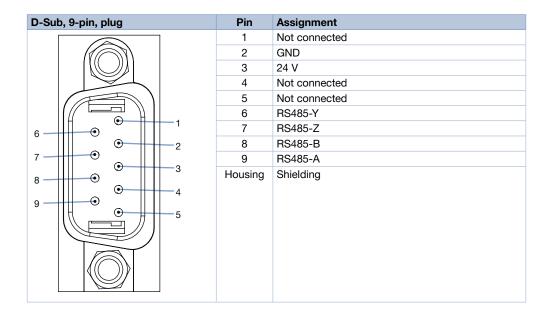

6. Performance specifications

6.1. MFM pressure loss diagram

The diagram shows an example of the pressure loss characteristics when air flows through. To determine the pressure loss of other gases, the corresponding air equivalent must first be calculated and the base block used for the other gas taken into account.

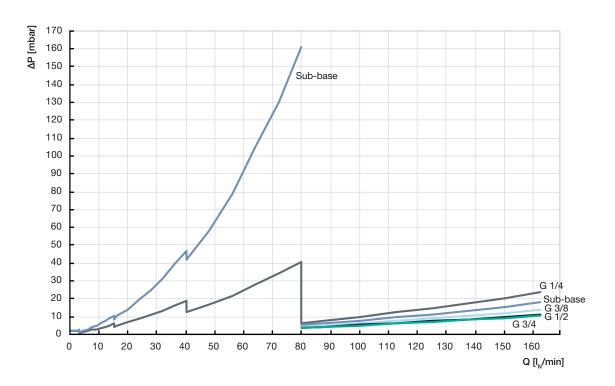



6.2. Nominal flow range of typical gases

Note:

- All values refer to 1013.25 mbar abs and 273.15 K (0 °C) (Index N)
- · Other gases and gas mixtures are possible on request.


Gas	Min. Q _{Nom}	Max. Q _{Nom}
	[l _N /min]	[l _N /min]
Acetylene	0.01	65
Helium	0.01	1000
Carbon dioxide	0.02	80
Air	0.01	160
Methane	0.01	160
Oxygen	0.01	160
Nitrogen	0.01	160
Hydrogen	0.01	1000
Propane	0.03	44

7. Product operation

7.1. Measuring principle

Measurement takes place via bypass. A laminar flow element (LFE) in the main channel creates a low pressure drop. A part of the gas flow is thereby directed into a side channel. A sensor measures the mass flow as temperature difference. The measurement is performed in a specially shaped flow channel whose wall contains a Si chip with an etched membrane. A heating resistor and 2 temperature sensors, one upstream and one downstream, are placed on this membrane.

If the heating resistor is fed with a constant voltage, the differential voltage of the temperature sensors indicate the gas flow over the chip.

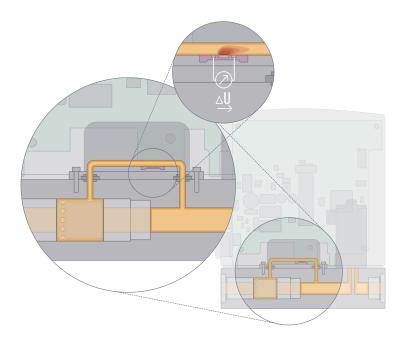



8. Product accessories

8.1. Bürkert Communicator software


Note:

The corresponding communication software can be downloaded from the website Type 8920 ▶.

The Bürkert Communicator is the most important software component of the EDIP (Efficient Device Integration Platform). Various features of this universal tool simplify the configuration and parametrisation of devices equipped with a digital CANopen-based interface. With this tool, the user has a complete overview of cyclic process values as well as acyclic diagnostic data. The integrated graphical programming environment enables the creation of decentralised sub-system control functions. The connection to the PC is established with a USB büS interface set. The adapter is available as an accessory (see "9.5. Ordering chart accessories" on page 24).

The Bürkert Communicator enables:

- Configuration, parametrisation and diagnosis of EDIP devices / networks
- · Switching between defined gases
- · Easy and comfortable mapping of cyclic values
- · Graphic display, monitoring and storage of process values
- Firmware update of the connected EDIP devices
- Saving and restoring device configurations
- Zero-point adjustment in case of changed ambient conditions
- · Guided re-calibration routine

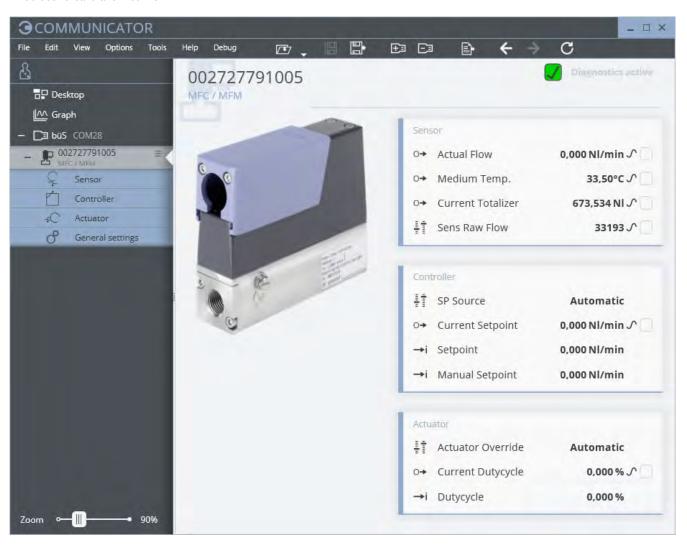

Visit product website ▶ 22 | 24



8.2. Connecting Type 8741 with the Bürkert Communicator software

The Bürkert Communicator software interface is based on CANopen. The appropriate bus termination is mandatory. For Type 8741 Analogue, Industrial Ethernet or Modbus RTU, activate the termination resistor switch on the büS stick. For Type 8741 büS/CANopen, the termination resistor must not be activated in case the device is already integrated into a properly terminated bus network.

- For Type 8741 Analogue, Industrial Ethernet or Modbus RTU, the connection is established via the device's micro USB socket (USB büS interface set 2 contains the required accessories).
- For Type 8741 büS/CANopen, the connection is established via the 4-pin terminal block (USB büS interface Set 1 contains the required accessories).

Please note: no external power supply must be connected to the micro USB socket. The device must be provided with power as described in chapter "5. Device / Process connections" on page 18.

8.3. Configuration management for easy device replacement

Depending on the electrical connection of the MFC, the following options for device replacement are available:

- If a device needs to be replaced, the memory card can be removed from the defective device and inserted into the new one. This transfers all data of the device to be replaced to the new device. The memory card is available as an accessory and must be ordered separately (see "9.5. Ordering chart accessories" on page 24).
- Option for Type 8741 büS/CANopen: The device is exchanged via the configuration provider of the higher-level gateway control (ME43 or ME63). In the gateway, a memory card is required. The memory card is available as an accessory and must be ordered separately (see "9.5. Ordering chart accessories" on page 24).

In order to successfully exchange the device, it is necessary that both the new device and the device to be replaced possess the same device ID.

8.4. Web server for Industrial Ethernet variant

The Industrial Ethernet-based devices (except for the EtherCAT® protocol) from software version A.13.00.00 dispose of an integrated web server. The server can be accessed via a web browser by entering the device's IP address (factory setting IP192.168.1.100).

9. Ordering information

9.1. Bürkert eShop



Bürkert eShop - Easy ordering and quick delivery

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

Order online now

9.2. Recommendation regarding product selection

Note:

Use the Product Enquiry Form (see "9.4. Bürkert Product Enquiry Form" on page 24) for the device details and send it to us once completed.

For the proper choice of the actuator orifice within the MFC, you need to know not only the required maximum flow rate Q_{nom} but also the pressure values directly before and after the MFC (p_1 , p_2) at Q_{nom} . In general, these pressures are not the same as the overall inlet and outlet pressures of the whole plant, because usually, additional flow resistors (tubing, additional shut-off valves, nozzles etc.) are present both before and after the MFC.

Please use the Product Enquiry Form to indicate the pressures directly before and after the MFC. If these are unknown or not accessible to measurement, estimates are to be made by taking into account the approximate pressure drops over the flow resistors before and after the MFC, at Q_{nom} flow rate. In addition, please quote the maximum inlet pressure $p_{1 \text{ max}}$ to be encountered. This data is needed to make sure the actuator is able to provide a close-tight function within all the specified modes of operation.

Visit product website ▶ 23 | 24



9.3. Bürkert product filter



Bürkert product filter - Get quickly to the right product

You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

Try out our product filter

9.4. Bürkert Product Enquiry Form



Bürkert Product Enquiry Form - Your enquiry quickly and compactly

Would you like to make a specific product enquiry based on your technical requirements? Use our Product Enquiry Form for this purpose. There you will find all the relevant information for your Bürkert contact. This will enable us to provide you with the best possible advice.

Fill out the form now

9.5. Ordering chart accessories

Description	Article no.
General accessories	
USB büS interface set 1 (Type 8923) for connection to the Bürkert Communicator software: includes connection cable (M12 and micro USB), stick with integrated terminating resistor, power supply and software	772426 ≒
USB büS interface set 2 (Type 8923) for connection to the Bürkert Communicator software: including büS stick, connection cable to M12 plug, M12 connection cable on micro USB for the büS service interface and Y-distributor, cable length: 0.7 m	772551 ≒
Power supply unit Phoenix Class2 (Type 1573), 85240 V AC/24 V DC, 1.25 A, NEC Class 2 (UL 1310)	772438 🛱
Power supply unit for standard rail (Type 1573), 100240 V AC/24 V DC, 1 A, NEC Class 2 (UL 1310)	772361 🛱
Power supply unit for standard rail (Type 1573), 100240 V AC/24 V DC, 2 A, NEC Class 2 (UL 1310)	772362 📜
Power supply unit for standard rail (Type 1573), 100240 V AC/24 V DC, 4 A	772363 🛱
Memory card	On request
Device description files for software interfaces	Download from www.burkert.com
Bürkert Communicator software	Download from www.burkert.com
For 8741 büS/CANopen	
Terminal block 4-pin (included in delivery)	565876 ≒
Terminal block 4-pin with integrated 120 Ω resistance for büS connection	566066 ≒
büS cable, 50 m	772413 🖼
büS cable, 100 m	772414 📜
LabVIEW device driver	On request
For 8741 Analogue	
Terminal block 6-pin (standard for 8741, included in delivery of the corresponding analogue variant)	On request
D-sub adapter cable, on strand, cable length: 5 m	580882 ≒
D-sub adapter cable, on strand, cable length: 10 m	580883 ≒

Visit product website

24 | 24