

**Design:**

2-way solenoid valve, internally piloted, normally closed (Circuit function A).

**Marking (example):**

Body Material  
BR Brass

**Seal Materials and Fluids handled:**

See Table1.

**Fluid and Ambient Temperature:**

See Table 1.

**Pressure Range:**

Minimum pressure differential between inlet and outlet port is 14 PSI.

Maximum inlet pressure see label on valve.

**Installation:**

Before installing valve ensure that piping etc. is free of foreign matter (metal fillings, seal material, welding scale etc.). PTFE tape is recommended for sealing ports. Arrow on valve body gives flow direction. Installation as required but preferable with coil uppermost. Installation in this position tends to prevent foreign matter remaining in pilot valve (increased life). A strainer upstream of valve, protects against effects of foreign matter. Do not put any loads on coil unit. Pipework should be supported such that valve body is not under strain. Do not allow a pipe-end or sealing material to block the pilot bore within the valve outlet. Inlet and outlet of valve must be fullbore and pipework unrestricted.


Voltage 12V or 24V  
UL / UR valid with  
class 2 power supply only

**Seal Material**

- EPDM = EPDM
- FKM = FKM
- EG = PTFE Seat and Graphite seal

**Circuit Function**

- A = Normally Closed

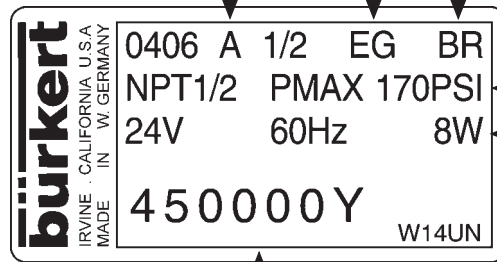


Recorder No. →

Voltage / Frequency / Power Consumption →

Maximum Pressure →

Table 1		Seal materials	
Fluid	Temperatures [°F]	Ethylene (A) Propylene	PTFE (G)
Air	Fluid T. Ambient	+ 32 to + 275 + 14 to + 130	+ 32 to + 356 + 14 to + 130
Water	Fluid T. Ambient	+ 50 to + 212 + 32 to + 130	+ 32 to + 212 + 32 to + 130
Neutral gas	Fluid T. Ambient	+ 32 to + 275 + 14 to + 130	+ 32 to + 356 + 32 to + 130
Light oil	Fluid T. Ambient	+ 50 to + 194 + 14 to + 130	+ 50 to + 194 + 14 to + 130
LP-gas	Fluid T. Ambient	+ 32 to + 140 + 14 to + 130	+ 32 to + 140 + 14 to + 130
Steam	Fluid T. Ambient	+ 212 to + 275 + 14 to + 130	+ 212 to + 356 + 14 to + 130

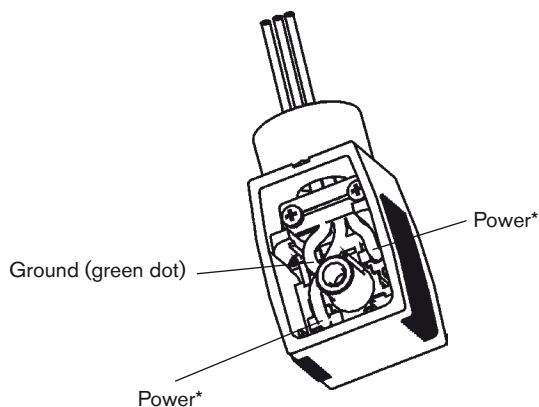**Wiring Diagram****Electrical Connection Type 2509**

\* Orientation is not important

**Electrical Connection:**

Ensure supply voltage/frequency corresponds with that on label.

Voltage tolerance is  $\pm 10\%$ .

Available Electrical Connections see "Marking".

Wiring diagram see above.

For this product to be considered UL-listed and CSA approved for General Purpose and FM approved for Hazardous Locations Division 2, it must be in conjunction with the type 2509 cable plug connector (Electrically Operated Valves Parts, YSY12).

The connector and gasket must be assembled to the valve with the screw provided after the connection of the wire leads. This valve and connector assembly is delivered together and is to be used as one unit.

For valves to be used in Intrinsically Safe Applications the positive pole is identified by a "+" on the pin or wire No. 1 has to be connected to the "+".

See Control Drawing for the Rules of Interconnection.

**Warning:**

All valves to be used in Intrinsically Safe Applications must be clearly marked as Intrinsically Safe Apparatus.

**Trouble-Shooting:**

Check port connections, minimum operating pressure differential if required and supply voltage. Ensure pilot hole in piston is clear and pilot bore in the valve outlet is not obstructed. If core does not pull in, check for short circuit, coil burn-out or foreign matter impeding core movement. A jammed or missing core causes the coil to overheat in the case of AC supply.

**Warning:**

These products are designed to operate in a wide variety of applications, it is the user's responsibility to select a model that is appropriate for the application. This product is designed to be installed only by suitably qualified and trained personnel. Specifications should not be exceeded under any circumstances.

The torque for the terminal screw on type 2509 is 0,5 Nm (4,4 lbf-in.).

Changes made to this product will render any applicable warranty null and void.

Specifications subject to change without notice.

Any questions? Please call Bürkert Contromatic Technical Service at (949) 223 31 00.

**Germany**

Contact address:

Bürkert Fluid Control Systems  
Sales Center  
Chr.-Bürkert-Str. 13-17  
D-74653 Ingelfingen  
Tel. + 49 (0) 7940 - 10 91 111  
Fax + 49 (0) 7940 - 10 91 448  
E-mail: info@de.buerkert.com

**International**

Contact addresses can be found on the Internet at:

[www.burkert.com](http://www.burkert.com) → Bürkert → Company → Locations