



Direct-acting 2/2-way plunger valve

- Direct-acting and compact small valve up to DN 2.4
- Slipped over coil system
- Simple and fast flange or manifold mounting
- Quick coupling (push-in fitting) for push-in connectors
- Explosion-proof variants

Product variants described in the data sheet may differ from the product presentation and description.

Type description

The 7011 valve is a direct-acting plunger valve. The stopper and the core guide tube are welded together to increase pressure resistance and leak-tightness. Various housing and seal material combinations are available depending on the actual application. A Bürkert-specific flange variant (SFB) enables the space-saving arrangement of valves on a multiple manifold. The range is supplemented by variants conforming to DVGW EN 161 and explosion-proof variants. Push-in fittings can be selected for a flexible hose connection. In combination with a plug conforming to DIN EN 175301 - 803 shape B, the valves satisfy degree of protection IP65.

Table of contents

1. General technical data	4
1.1. Standard variant.....	4
2. Circuit functions	5
3. Approvals and conformities	5
3.1. General notes	5
3.2. Conformity	5
3.3. Standards	5
3.4. Explosion protection.....	5
3.5. North America (USA/Canada)	5
3.6. Foods and beverages/Hygiene	6
4. Materials	6
4.1. Bürkert resistApp	6
4.2. Material specifications	6
Standard variant circuit function A	6
Standard variant circuit function B	7
5. Dimensions	8
5.1. Standard variant.....	8
Threaded variant.....	8
Flange variant.....	9
Flange pattern	10
5.2. Coil variants	10
Variants according to industry standard form B	10
Further electrical connections.....	11
5.3. Single manifold	11
5.4. Multiple manifold.....	12
Manifolds for valves with 20 mm coil (SG2)	12
Manifolds for valves with 24.5 mm coil (SG3) resp. CF B.....	13
6. Product connections	14
6.1. Port connection	14
Pin assignment	14
Pin assignment vacuum applications.....	15
7. Performance specifications	15
7.1. Power consumption	15
Standard variant, coil size 24.5 mm [0.96 in]	15
Standard variant, coil size 20 mm [0.79 in].....	16
8. Ordering information	17
8.1. Bürkert eShop	17
8.2. Bürkert product filter	17
8.3. Bürkert Product Enquiry Form.....	17
8.4. Ordering chart	18
Standard variant according to industry standard form B, coil size 24.5 mm [0.96 in], coil UL Recognized (cURus).....	18
Standard variant according to industry standard form B, coil size 20 mm [0.79 in], coil UL Recognized (cURus)	21
Additional options.....	23

- 8.5. Ordering chart accessories.....23
 - Single manifold23
 - Multiple manifold.....23
 - Accessories for manifolds.....23
 - Accessories for G 1/8 threaded connections23
 - Cable plug Type 2516, form C according to DIN EN 175301 - 80324
 - Cable plug Type 2507, form B according to industry standard.....24

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

1. General technical data

1.1. Standard variant

Product properties	
Dimensions	Further information can be found in chapter "5. Dimensions" on page 8.
Material	
Seal	FKM, EPDM
Body	Brass, polyamide (PA), stainless steel 1.4305/303
Manual override	Optional
Weight	
Standard variant 24.5 mm solenoid coil	5 ¼ oz (with NPT ¼)
Standard variant 20 mm solenoid coil	4 ¼ oz (with NPT ¼)
Orifice	DN 1.2...DN 2.4
Circuit function	A and B Further information can be found in chapter "2. Circuit functions" on page 5.
Thermal insulation class of solenoid coil	Epoxy coil class H
Performance data	
Duty cycle	
Single valve	100 % resp. 50 % continuous operation
For block mounting on multiple manifold	With 4 W/5 W solenoid coil 100 % ED (at max. +131 °F)
Switching time ¹⁾	Opening: 8...15 ms Closing: 10...17 ms
Electrical data	
Operating voltage	24 V DC, 24 V 50 Hz, 24 V 60 Hz, 110 V 50 Hz, 120 V 60 Hz, 230 V 50 Hz, 240 V 60 Hz
Power consumption	Further information can be found in chapter "7. Performance specifications" on page 15.
Voltage tolerance	± 10 %
Medium data	
Operating medium	Neutral gases and liquids (e.g. compressed air, water, hydraulic oil, technical vacuum)
Medium temperature	+ 14 °F...+ 212 °F
Viscosity	Max. 21 cSt
Product connections	
Electrical connection	<ul style="list-style-type: none"> • According to DIN EN 175301 - 803 form C for cable plug Type 2516 ▶ Further information can be found in chapter "Cable plug Type 2516, form C according to DIN EN 175301 - 803" on page 24. • According to industry standard form B for cable plug Type 2507 ▶ Further information can be found in chapter "Cable plug Type 2507, form B according to industry standard" on page 24. • Flat pin terminal as protection class III device • Flying leads connection on request for coil size 20 mm
Port connection	M5, G ¼, NPT ¼, flange
Approvals and conformities	
Degree of protection	IP65 with cable plug and ATEX/IECEx cable variant
Explosion protection	Further information can be found in chapter "3.4. Explosion protection" on page 5.
North America (USA/Canada)	Further information can be found in chapter "3.5. North America (USA/Canada)" on page 5.
Foods and beverages/Hygiene	Further information can be found in chapter "3.6. Foods and beverages/Hygiene" on page 6.
Environment and installation	
Installation position	As required, preferably with actuator upright
Ambient temperature	Max. + 131 °F resp. + 167 °F (depending on power level)

1.) Measurement at + 68 °F, 87 psi at the valve outlet acc. to DIN ISO 12238:2001, opening: pressure build-up 0...10 %, closing: pressure reduction 100...90 %

2. Circuit functions

Symbol	Description
	Circuit function A (CF A) 2/2-way solenoid valve Direct-acting Normally closed
	Circuit function B (CF B) 2/2-way solenoid valve Direct-acting Normally open

3. Approvals and conformities

3.1. General notes

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available variants can be supplied with the below mentioned approvals or conformities.

3.2. Conformity

In accordance with the Declaration of Conformity, the product is compliant with the EU Directives.

3.3. Standards

The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

3.4. Explosion protection


Approval	Description
	Optional: Explosion protection (valid for coils with fixed cable outlet) ATEX: EPS 21 ATEX 1 128 X II 2G Ex mb IIC T4 Gb II 2D Ex mb IIIC T130 °C Db IECEx: IECEx EPS 21.0045X Ex mb IIC T4 Gb Ex mb IIIC T130 °C Db The fixed cable is halogen-free according to IEC 60754 - 1

3.5. North America (USA/Canada)

Approval	Description
	Valid for coils: UL Recognized for the USA and Canada The coils are UL Recognized for the USA and Canada according to: <ul style="list-style-type: none"> • UL 429 (electrically operated valves) • CAN/CSA-C22.2 No. 139


DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

3.6. Foods and beverages/Hygiene

Conformity	Description
FDA	FDA – Code of Federal Regulations (valid for the variable code PL02, PL03) All wetted materials are compliant with the Code of Federal Regulations published by the FDA (Food and Drug Administration, USA) according to the manufacturer's declaration.
USP	United States Pharmacopeial Convention (USP) (valid for the variable code PL04) All wetted materials are biocompatible according to the manufacturer's declaration.
	EC Regulation 1935/2004 of the European Parliament and of the Council (valid for the variable code PL01, PL02) All wetted materials are compliant with EC Regulation 1935/2004/EC according to the manufacturer's declaration.

4. Materials

4.1. Bürkert resistApp

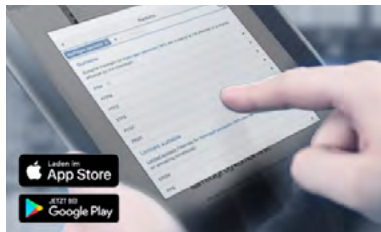


Bürkert resistApp – Chemical resistance chart

You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.

[Start chemical resistance check](#)


4.2. Material specifications

Standard variant circuit function A

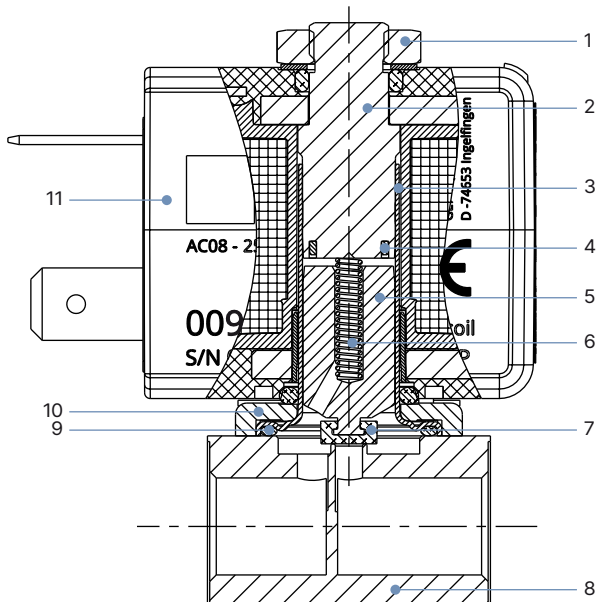

No.	Element	Material
1	Nut	DIN 176 Surface finish thick film passivated KOSA0101
2	Stopper	Stainless steel 1.4113/434
3	Core guide tube	Stainless steel 1.4303 ST/305L
4	Shading ring	Copper (optional silver)
5	Core	Stainless steel 1.4113/434
6	Spring	Stainless steel 1.4310/301
7	Seal	FKM/EPDM
8	Valve body	Brass, stainless steel 1.4305/303, PA (polyamide)
9	O-ring	FKM/EPDM
10	Flange	<ul style="list-style-type: none"> Surface finish thick film passivated KOSA0101 (brass variant) Nickel-plated surface (stainless steel variant)
11	Coil	Epoxy

Standard variant circuit function B

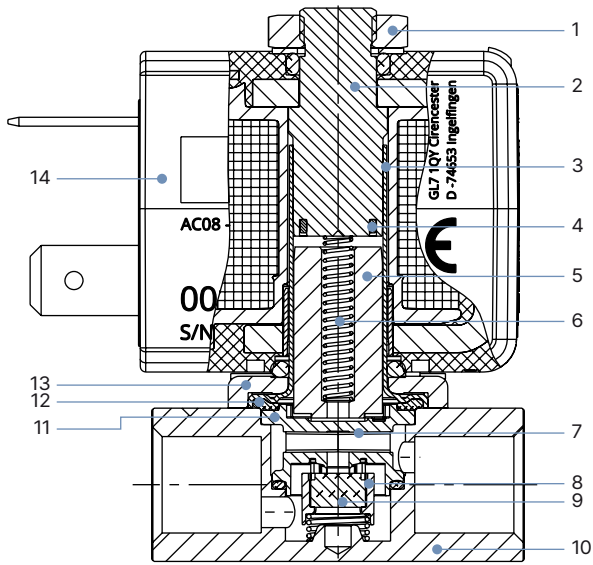

No.	Element	Material
1	Nut	DIN 176 Surface finish thick film passivated KOSA0101
2	Stopper	Stainless steel 1.4113/434
3	Core guide tube	Stainless steel 1.4303 ST/305L
4	Shading ring	Copper (optional silver)
5	Core	Stainless steel 1.4113/434
6	Spring	Stainless steel 1.4310/301
7	Insert	PEEK GF30
8	Seal holder	PEEK GF30
9	Seat seal	FKM
10	Valve body	Brass, stainless steel 1.4305/303, PA (polyamide)
11	Seal	FKM/EPDM
12	O-ring	FKM/EPDM
13	Flange	<ul style="list-style-type: none"> • Surface finish thick film passivated KOSA0101 (brass variant) • Nickel-plated surface (stainless steel variant)
14	Coil	Epoxy


5. Dimensions

5.1. Standard variant

Threaded variant

Note:

- Dimensions in mm [inch]
- Variants according to industry standard form B

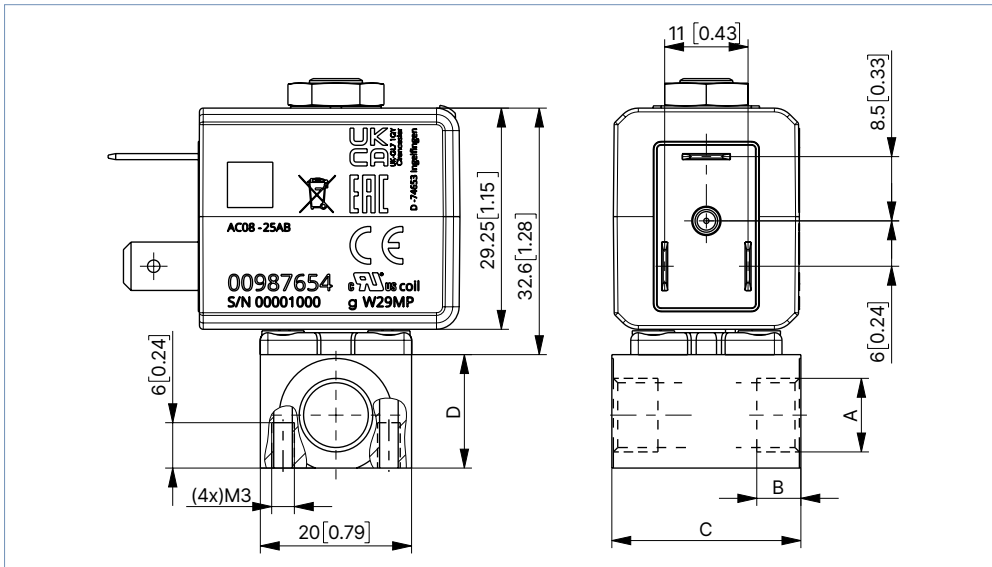


Port connection	A	B		C		D	
		[mm]	[in]	[mm]	[in]	[mm]	[in]
Thread CF A	M5	5	0.19	20	0.78	10	0.39
	G 1/8	8	0.31	25	0.98	15	0.59
	NPT 1/8	7	0.27	25	0.98	15	0.59
Thread CF B	G 1/8	8	0.31	34	1.33	14	0.55
	NPT 1/8	7	0.27	34	1.33	14	0.55

DTS 1000582646 EN Version: RL (released | freigegeben | valide) printed: 18.02.2026

Flange variant

Note:

- Dimensions in mm [inch]
- Variants according to industry standard form B

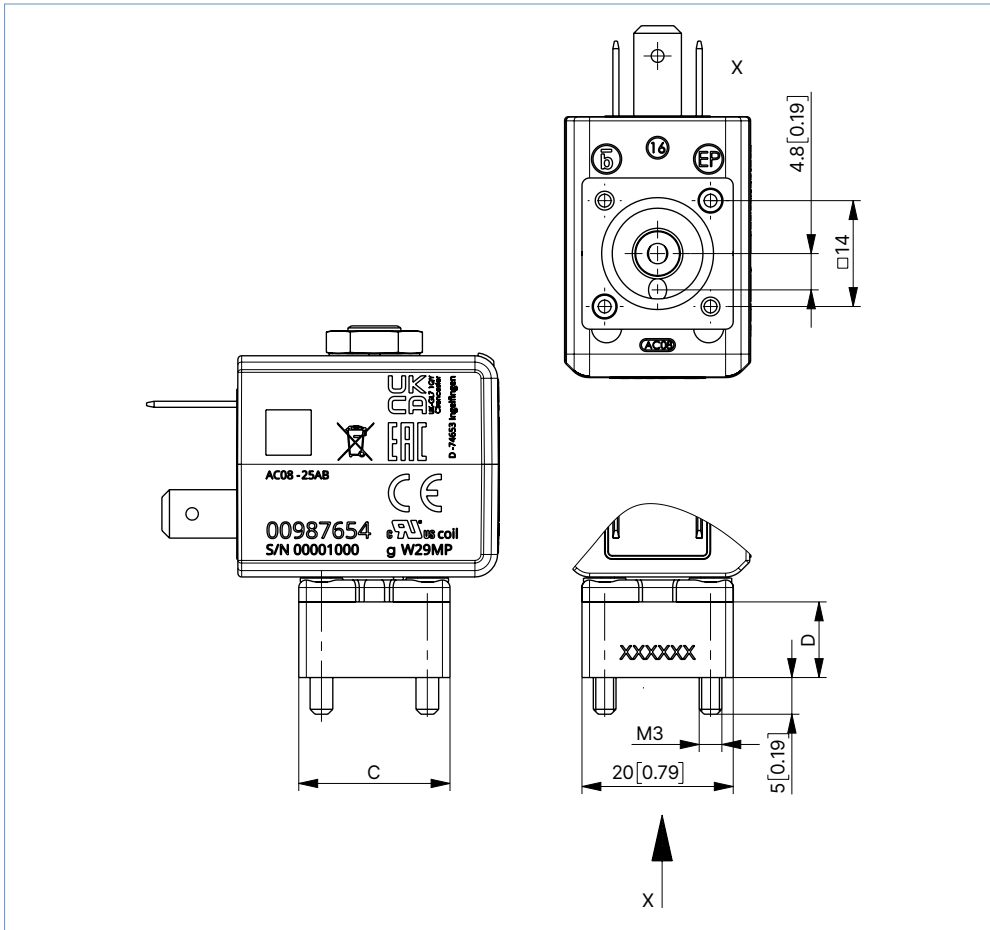


Port connection	A		B		C		D	
	[mm]	[in]	[mm]	[in]	[mm]	[in]	[mm]	[in]
Flange CF A	-	-	-	-	20	0.78	10	0.39
Flange CF B	-	-	-	-	25	0.98	15	0.59

Flange pattern

Note:

- Dimensions in mm [inch]
- On the connection side, the geometries are to be realised as shown in the following drawing.
- Flange variant (FK01) according to FST 1000225877

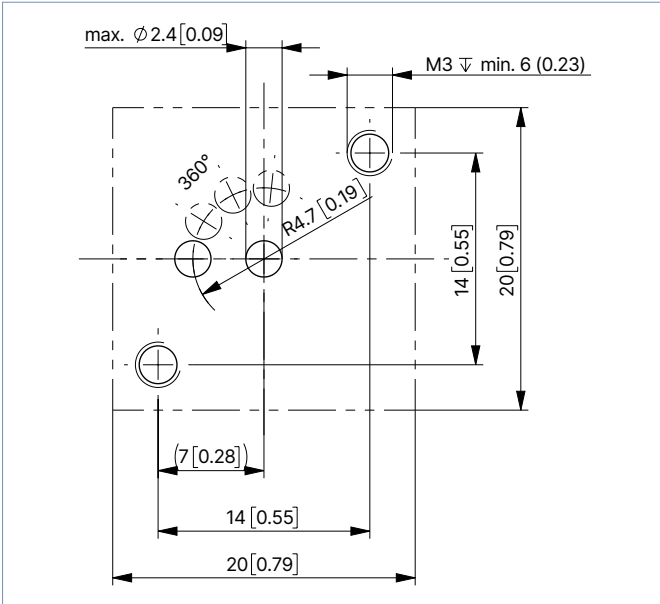


5.2. Coil variants

Variants according to industry standard form B

Note:


Dimensions in mm [inch]

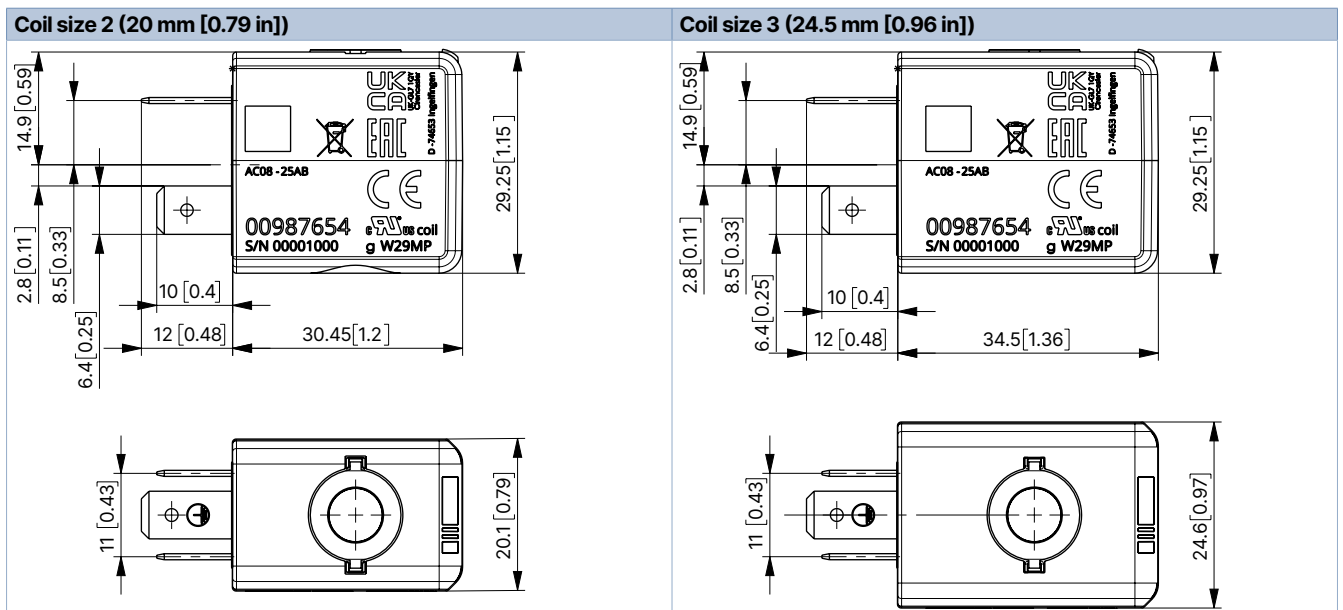

Further electrical connections

Note:


- Dimensions in mm [inch]
- Specifications apply to coil sizes 20 mm [0.79 in] and 24.5 mm [0.96 in]

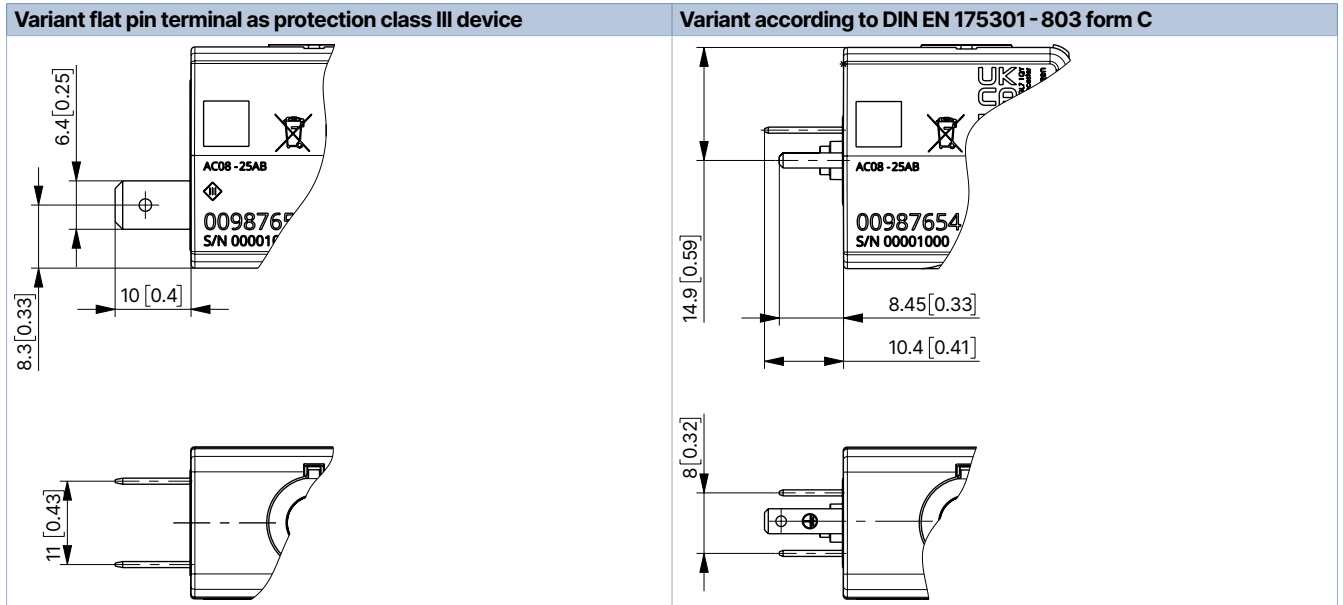

5.3. Single manifold

Note:

Dimensions in mm [inch]

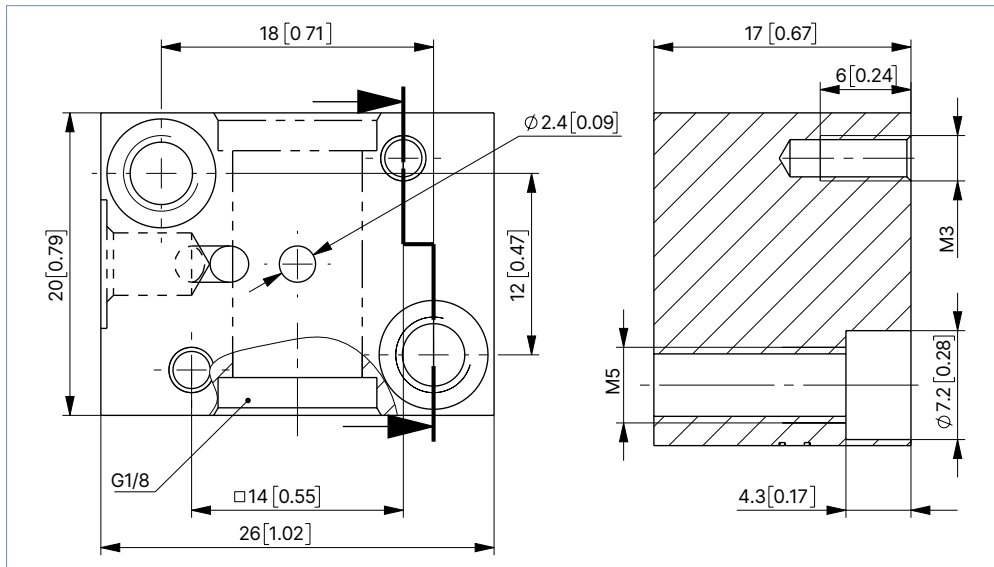

Quantity of valve slots	A		B		C		Article no.
	[mm]	[in]	[mm]	[in]	[mm]	[in]	
1	20	0.78	12	0.47	-	-	005312


DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

5.4. Multiple manifold

Manifolds for valves with 20 mm coil (SG2)

Note:

- Dimensions in mm [inch]
- Can only be combined with Type 7011 valves with coil size 20 mm [0.79 in]

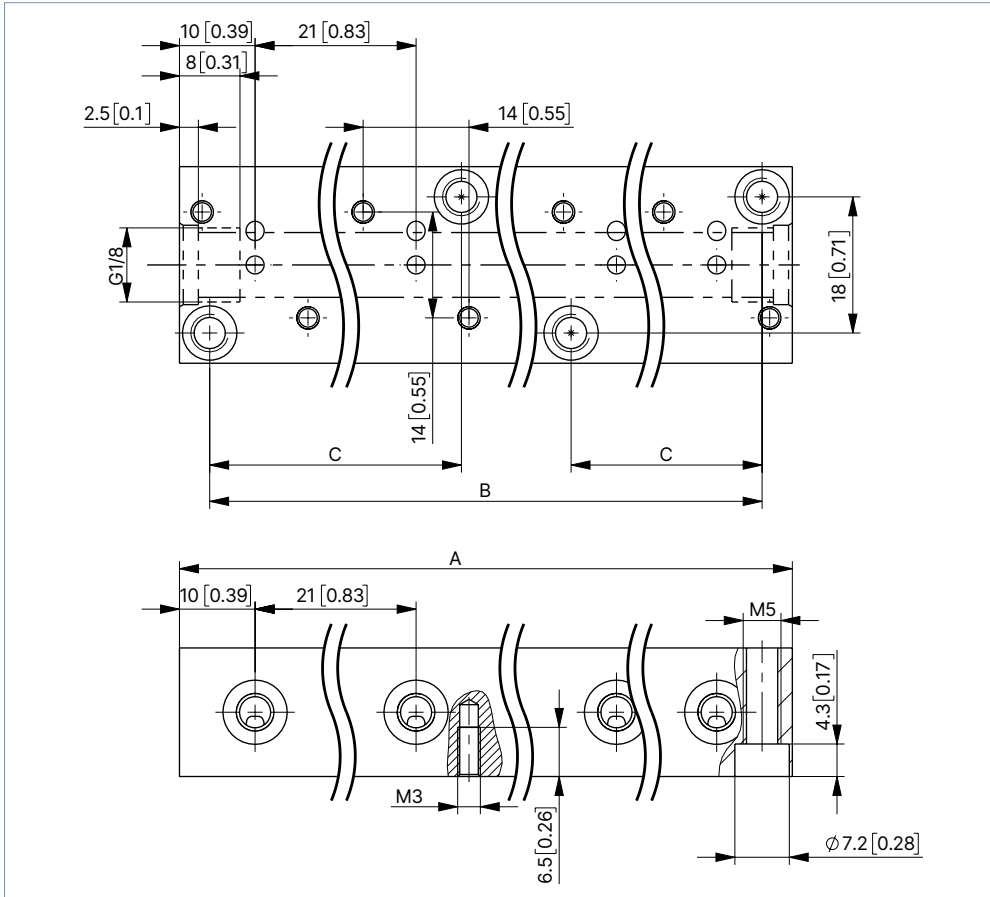


Quantity of valve slots	A		B		C		Article no.
	[mm]	[in]	[mm]	[in]	[mm]	[in]	
2	41	1.61	33	1.29	-	-	005355 𐀀
3	62	2.44	54	2.12	-	-	005313 𐀀
4	83	3.26	75	2.95	-	-	005314 𐀀
5	104	4.09	96	3.77	-	-	005315 𐀀
6	125	4.92	117	4.6	-	-	005316 𐀀
7	146	5.74	138	5.43	-	-	005893 𐀀
8	167	6.57	159	6.25	54	2.12	005166 𐀀
9	188	7.4	180	7.08	54	2.12	005241 𐀀
10	209	8.22	201	7.91	75	2.95	005819 𐀀
11	230	9.05	222	8.74	75	2.95	005242 𐀀
12	251	9.88	243	9.56	96	3.77	005222 𐀀

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Manifolds for valves with 24.5 mm coil (SG3) resp. CF B

Note:

- Dimensions in mm
- Can be combined with Type 7011 valves with coil size 24.5 mm [0.965 in] resp. for Type 7011 valves with CF B

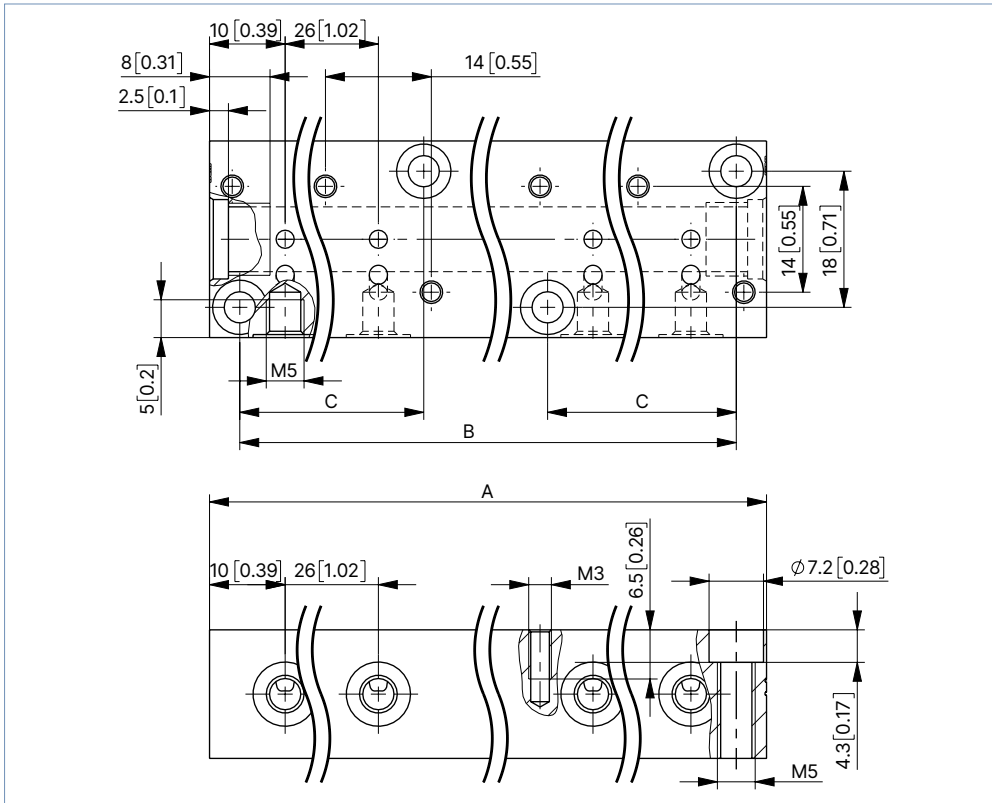

Quantity of valve slots	A		B		C		Article no.
	[mm]	[in]	[mm]	[in]	[mm]	[in]	
2	46	1.81	38	1.49	-	-	60021427
3	72	2.83	64	2.51	-	-	60021342
4	98	3.85	90	3.54	-	-	60021429
5	124	4.88	116	4.56	-	-	60021428
6	150	5.9	142	5.59	-	-	60021442
7	176	6.92	168	6.61	-	-	20060327
8	202	7.95	194	7.63	64	2.51	20060338
9	228	8.97	220	8.66	64	2.51	20060341
10	254	10	246	9.67	90	3.54	20015744
11	280	11.02	272	10.7	90	3.54	20060374
12	306	12.04	298	11.73	116	4.56	20060376

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

6. Product connections

6.1. Port connection

Pin assignment

Threaded variant CF A	Threaded variant CF A (+MC14)	Flange variant CF A
Flange variant CF A (+MC14)	Flange variant CF A (+AA05)	Flange variant CF A (+AC45+AD33 / +AD33+NA02)
Threaded variant CF B	Flange variant CF B	Flange variant CF B (+AD01)

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Pin assignment vacuum applications

In vacuum applications the existing flow direction must be maintained. Vacuum must therefore always be applied to A. (Other terminal assignment on request)

7. Performance specifications

7.1. Power consumption

Standard variant, coil size 24.5 mm [0.96 in]

Coil	Orifice [mm]	Electrical power					Switching times ¹⁾	
		Inrush AC	Hold AC		DC		Opening	Closing
		[VA]	[VA]	[W]	Cold [W]	Warm [W]	[ms]	[ms]
24 V/DC/7 W	1.2	–	–	–	7	5.5	8..15	10..17
	1.6							
	2.0							
	2.4							
24 V/50 Hz/6 W	1.2	14	8	6	–	–		
	1.6							
	2.0							
	2.4							
230 V/50 Hz/6 W	1.2	14	8	6	–	–		
	1.6							
	2.0							
	2.4							
24 V/DC/5.5 W	1.2	–	–	–	5.5	4.5		
	1.6							
	2.0							
	2.4							
24 V/50 Hz/4 W	1.2	12	6.5	4	–	–		
	1.6							
	2.0							
	2.4							
230 V/50 Hz/4 W	1.2	12	6.5	4	–	–		
	1.6							
	2.0							
	2.4							
24 V/DC/14 W	1.2	–	–	–	14	11		
	1.6							
	2.0							
	2.4							
24 V/DC/11 W	1.2	–	–	–	11	8.5		
	1.6							
	2.0							
	2.4							

1.) Measurement at +68 °F, 87 psi²⁾ at the valve outlet acc. to DIN ISO 12238:2001, opening: pressure build-up 0...10%, closing: pressure reduction 100...90%
 2.) Pressure data: overpressure to atmospheric pressure and air as a medium

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Standard variant, coil size 20 mm [0.79 in]

Coil	Orifice [mm]	Electrical power					Switching times ¹⁾	
		Inrush AC [VA]	Hold AC		DC		Opening [ms]	Closing [ms]
			[VA]	[W]	Cold [W]	Warm [W]		
24 V/DC/6.5 W	1.2	–	–	–	6.5	5	8...15	10...17
	1.6							
	2.0							
	2.4							
24 V/50 Hz/6 W	1.2	11	7	6	–	–		
	1.6							
	2.0							
	2.4							
230 V/50 Hz/6 W	1.2	11	7	6	–	–		
	1.6							
	2.0							
	2.4							
24 V/DC/5 W	1.2	–	–	–	5	4		
	1.6							
	2.0							
	2.4							
24 V/50 Hz/4 W	1.2	9	5	4	–	–		
	1.6							
	2.0							
	2.4							
230 V/50 Hz/4 W	1.2	9	5	4	–	–		
	1.6							
	2.0							
	2.4							
24 V/DC/14 W	1.2	–	–	–	14	11		
	1.6							
	2.0							
	2.4							
24 V/DC/11 W	1.2	–	–	–	11	9		
	1.6							
	2.0							
	2.4							

1.) Measurement at +68 °F, 87 psi²⁾ at the valve outlet acc. to DIN ISO 12238:2001, opening: pressure build-up 0...10 %, closing: pressure reduction 100...90 %
 2.) Pressure data: overpressure to atmospheric pressure and air as a medium

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

8. Ordering information

8.1. Bürkert eShop



Bürkert eShop – Easy ordering and quick delivery

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

[Order online now](#)

8.2. Bürkert product filter




Bürkert product filter – Get quickly to the right product

You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

[Try out our product filter](#)

8.3. Bürkert Product Enquiry Form

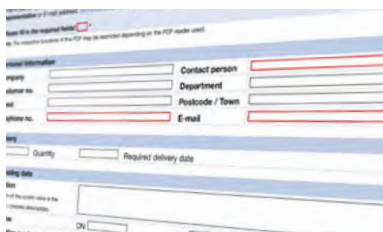

Bürkert Product Enquiry Form – Your enquiry quickly and compactly

Would you like to make a specific product enquiry based on your technical requirements? Use our Product Enquiry Form for this purpose. There you will find all the relevant information for your Bürkert contact. This will enable us to provide you with the best possible advice.

[Fill out the form now](#)

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

8.4. Ordering chart

Standard variant according to industry standard form B, coil size 24.5 mm [0.96 in], coil UL Recognized (cURus)

Note:

All valves are delivered without a cable plug.

Circuit function	Port connection	Orifice [mm]	C _v value water ¹⁾ [gal/min]	Voltage/ Frequency/ Power [V/Hz/W]	Maximum duty cycle	Pressure range ²⁾ (MAWP ³⁾)				Article no.				
						Ambient temperature + 167 °F		Ambient temperature + 131 °F		Brass body	Stainless steel body			
						Water [psi]	Air [psi]	Water [psi]	Air [psi]	FKM seal				
CF A 2/2-way solenoid valve Direct-acting Normally closed 	NPT 1/8	1.2	0.05	24/DC/7	100 % ED	-	-	0...334	0...334	o. r.	o. r.			
				24/60/6		-	-	0...653	0...653	o. r.	o. r.			
				120/60/6		-	-	0...653	0...653	o. r.	o. r.			
				240/60/6		-	-	0...653	0...653	o. r.	o. r.			
				24/DC/5.5		0...232	0...232	-	-	o. r.	o. r.			
				24/DC/5.5		-	-	0...276	0...276	o. r.	o. r.			
				24/60/4		0...609	0...609	0...609	0...609	o. r.	o. r.			
				120/60/4		0...609	0...609	0...609	0...609	o. r.	o. r.			
				240/60/4		0...609	0...609	0...609	0...609	o. r.	o. r.			
				24/DC/14		-	-	0...653	0...653	o. r.	o. r.			
				1.6		0.07	100 % ED	24/DC/7	-	-	0...174	0...189	o. r.	o. r.
								24/60/4	-	-	0...435	0...435	o. r.	o. r.
								120/60/4	-	-	0...435	0...435	o. r.	o. r.
								240/60/4	-	-	0...435	0...435	o. r.	o. r.
								24/DC/5.5	0...131	0...131	-	-	o. r.	o. r.
								24/DC/5.5	-	-	0...152	0...152	o. r.	o. r.
							50 % ED	24/60/4	0...348	0...348	0...348	0...348	o. r.	o. r.
								120/60/4	0...348	0...348	0...348	0...348	o. r.	o. r.
								240/60/4	0...348	0...348	0...348	0...348	o. r.	o. r.
								24/DC/14	-	-	0...363	0...363	o. r.	o. r.
								24/DC/11	0...290	0...290	-	-	o. r.	o. r.
								24/DC/11	-	-	0...319	0...319	o. r.	o. r.
				2.0		0.13	100 % ED	24/DC/7	-	-	0...131	0...131	o. r.	o. r.
								24/60/4	-	-	0...319	0...319	o. r.	o. r.
		120/60/4	-		-			0...319	0...319	o. r.	o. r.			
		240/60/4	-		-			0...319	0...319	o. r.	o. r.			
		24/DC/5.5	0...94		0...94			-	-	o. r.	o. r.			
		24/DC/5.5	-		-			0...102	0...102	o. r.	o. r.			
		50 % ED	24/60/4		0...261		0...261	0...261	0...261	o. r.	o. r.			
			120/60/4		0...261		0...261	0...261	0...261	o. r.	o. r.			
			240/60/4		0...261		0...261	0...261	0...261	o. r.	o. r.			
			24/DC/14		-		-	0...276	0...276	o. r.	o. r.			
			24/DC/11		0...203		0...203	-	-	o. r.	o. r.			
			24/DC/11		-		-	0...232	0...232	o. r.	o. r.			
		NPT 1/8	2.4	0.15	100 % ED	24/DC/7	-	-	0...51	0...73	o. r.	o. r.		
						24/60/6	-	-	0...189	0...189	o. r.	o. r.		
						120/60/6	-	-	0...189	0...189	o. r.	o. r.		
						240/60/6	-	-	0...189	0...189	o. r.	o. r.		
						24/DC/5.5	0...44	0...51	-	-	o. r.	o. r.		
						24/DC/5.5	-	-	0...51	0...58	o. r.	o. r.		
						24/60/4	0...145	0...145	0...145	0...145	o. r.	o. r.		
						120/60/4	0...145	0...145	0...145	0...145	o. r.	o. r.		
						240/60/4	0...145	0...145	0...145	0...145	o. r.	o. r.		
						24/DC/14	-	-	0...131	0...145	o. r.	o. r.		
						24/DC/11	0...94	0...102	-	-	o. r.	o. r.		
						24/DC/11	-	-	0...109	0...116	o. r.	o. r.		

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Circuit function	Port connection	Orifice	C _v value water ¹⁾	Voltage/ Frequency/ Power	Maximum duty cycle	Pressure range ²⁾ (MAWP ³⁾)				Article no.	
						Ambient temperature + 167 °F		Ambient temperature + 131 °F		Brass body	Stainless steel body
		Water	Air	Water	Air	FKM seal					
		[psi]	[psi]	[psi]	[psi]						
CFA 2/2-way solenoid valve Direct-acting Normally closed 	Manifold (FK01)	1.2	0.05	24/DC/7	100 % ED	-	-	0...334	0...334	375836	375844
				24/60/6		-	-	0...653	0...653	o. r.	o. r.
				120/60/6		-	-	0...653	0...653	o. r.	o. r.
				240/60/6		-	-	0...653	0...653	o. r.	o. r.
				24/DC/5.5		0...232	0...232	-	-	375868	375876
				24/DC/5.5		-	-	0...276	0...276	o. r.	o. r.
				24/60/4		0...609	0...609	0...609	0...609	o. r.	o. r.
				120/60/4		0...609	0...609	0...609	0...609	o. r.	o. r.
				240/60/4		0...609	0...609	0...609	0...609	o. r.	o. r.
				24/DC/14		-	-	0...653	0...653	o. r.	o. r.
				24/DC/11		0...508	0...508	-	-	o. r.	o. r.
				24/DC/11		-	-	0...537	0...537	o. r.	o. r.
		1.6	0.07	24/DC/7	100 % ED	-	-	0...174	0...189	375837	375845
		24/60/6		-		-	0...435	0...435	o. r.	o. r.	
		120/60/6		-		-	0...435	0...435	o. r.	o. r.	
		240/60/6		-		-	0...435	0...435	o. r.	o. r.	
		24/DC/5.5		0...131		0...131	-	-	375869	375877	
		24/DC/5.5		-		-	0...152	0...152	o. r.	o. r.	
		24/60/4		0...348		0...348	0...348	0...348	o. r.	o. r.	
		120/60/4		0...348		0...348	0...348	0...348	o. r.	o. r.	
		240/60/4		0...348		0...348	0...348	0...348	o. r.	o. r.	
		24/DC/14		-		-	0...363	0...363	o. r.	o. r.	
		24/DC/11		0...290		0...290	-	-	o. r.	o. r.	
		24/DC/11		-		-	0...319	0...319	o. r.	o. r.	
		2.0	0.13	24/DC/7	100 % ED	-	-	0...131	0...131	375838	375846
		24/60/6		-		-	0...319	0...319	o. r.	o. r.	
		120/60/6		-		-	0...319	0...319	o. r.	o. r.	
		240/60/6		-		-	0...319	0...319	o. r.	o. r.	
		24/DC/5.5		0...94		0...94	-	-	375870	375878	
		24/DC/5.5		-		-	0...102	0...102	o. r.	o. r.	
		24/60/4		0...261		0...261	0...261	0...261	o. r.	o. r.	
		120/60/4		0...261		0...261	0...261	0...261	o. r.	o. r.	
		240/60/4		0...261		0...261	0...261	0...261	o. r.	o. r.	
		24/DC/14		-		-	0...276	0...276	o. r.	o. r.	
		24/DC/11		0...203		0...203	-	-	o. r.	o. r.	
		24/DC/11		-		-	0...232	0...232	o. r.	o. r.	
		2.4	0.15	24/DC/7	100 % ED	-	-	0...51	0...73	375839	375847
		24/60/6		-		-	0...189	0...189	o. r.	o. r.	
		120/60/6		-		-	0...189	0...189	o. r.	o. r.	
		240/60/6		-		-	0...189	0...189	o. r.	o. r.	
		24/DC/5.5		0...44		0...51	-	-	375871	375879	
		24/DC/5.5		-		-	0...51	0...58	o. r.	o. r.	
		24/60/4		0...145		0...145	0...145	0...145	o. r.	o. r.	
		120/60/4		0...145		0...145	0...145	0...145	o. r.	o. r.	
		240/60/4		0...145		0...145	0...145	0...145	o. r.	o. r.	
		24/DC/14		-		-	0...131	0...145	o. r.	o. r.	
		24/DC/11		0...94		0...102	-	-	o. r.	o. r.	
		24/DC/11		-		-	0...109	0...116	o. r.	o. r.	

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Circuit function	Port connection	Orifice	C _v value water ¹⁾	Voltage/ Frequency/ Power	Maximum duty cycle	Pressure range ²⁾ (MAWP ³⁾)				Article no.	
						Ambient temperature + 167 °F		Ambient temperature + 131 °F		Brass body	Stainless steel body
		[mm]	[gal/min]	[V/Hz/W]	Water [psi]	Air [psi]	Water [psi]	Air [psi]	FKM seal		
CFB 2/2-way solenoid valve Direct-acting Normally open 	NPT 1/8	2.0	0.12	24/DC/7	100 % ED	-	-	-	0...174	o. r.	o. r.
				24/60/6		-	-	-	0...210	o. r.	o. r.
				120/60/6		-	-	-	0...210	o. r.	o. r.
				240/60/6		-	-	-	0...210	o. r.	o. r.
				24/DC/5.5		-	0...145	-	-	o. r.	o. r.
				24/60/4		-	0...189	-	-	o. r.	o. r.
				120/60/4		-	0...189	-	-	o. r.	o. r.
				240/60/4		-	0...189	-	-	o. r.	o. r.
				240/60/4		-	0...189	-	-	o. r.	o. r.
	Manifold (FK01)	2.0	0.12	24/DC/7	100 % ED	-	-	-	0...174	20009528 𐀀	o. r.
				24/60/6		-	-	-	0...210	o. r.	o. r.
				120/60/6		-	-	-	0...210	o. r.	o. r.
				240/60/6		-	-	-	0...210	o. r.	o. r.
				24/DC/5.5		-	0...145	-	-	20009530 𐀀	o. r.
				24/60/4		-	0...189	-	-	o. r.	o. r.
				120/60/4		-	0...189	-	-	o. r.	o. r.
				240/60/4		-	0...189	-	-	o. r.	o. r.
				240/60/4		-	0...189	-	-	o. r.	o. r.

o. r. = on request

1.) Measurement at +68 °F, 14.5 psi²⁾ at the valve inlet and free outlet

2.) Pressure data: overpressure to atmospheric pressure and air as a medium

3.) Maximum allowable working pressure

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Standard variant according to industry standard form B, coil size 20 mm [0.79 in], coil UL Recognized (cURus)

Note:

All valves are delivered without a cable plug.

Circuit function	Port connection	Orifice	C _v value water ¹⁾	Voltage/Frequency/Power	Maximum duty cycle	Pressure range ²⁾ (MAWP ³⁾)		Article no.	
						Ambient temperature + 167 °F	Ambient temperature + 131 °F	Brass body	Stainless steel body
		[mm]	[gal/min]	[V/Hz/W]		Air [psi]	Air [psi]	FKM seal	
CF A 2/2-way solenoid valve Direct-acting Normally closed 	NPT 1/8	1.2	0.05	24/DC/6.5	100 % ED	–	0...189	o. r.	o. r.
				24/60/6		–	0...508	o. r.	o. r.
				120/60/6		–	0...508	o. r.	o. r.
				230/50/6		–	0...508	o. r.	o. r.
				24/DC/5		0...131	–	o. r.	o. r.
				24/DC/5		–	0...160	o. r.	o. r.
				24/50/4		0...392	0...392	o. r.	o. r.
				24/60/4		0...392	0...392	o. r.	o. r.
				230/50/4		0...392	0...392	o. r.	o. r.
				24/DC/14		–	0...464	o. r.	o. r.
				24/DC/11		0...363	–	o. r.	o. r.
				24/DC/11		–	0...435	o. r.	o. r.
		1.6	0.07	24/DC/6.5	100 % ED	–	0...123	o. r.	o. r.
				24/60/6		–	0...348	o. r.	o. r.
				120/60/6		–	0...348	o. r.	o. r.
				240/60/6		–	0...348	o. r.	o. r.
				24/DC/5		0...80	–	o. r.	o. r.
				24/DC/5		–	0...94	o. r.	o. r.
				24/60/4		0...247	0...247	o. r.	o. r.
				120/60/4		0...247	0...247	o. r.	o. r.
				240/60/4		0...247	0...247	o. r.	o. r.
				24/DC/14		–	0...319	o. r.	o. r.
				24/DC/11		0...247	–	o. r.	o. r.
				24/DC/11		–	0...261	o. r.	o. r.
		2.0	0.13	24/DC/6.5	100 % ED	–	0...87	o. r.	o. r.
				24/60/6		–	0...203	o. r.	o. r.
				120/60/6		–	0...203	o. r.	o. r.
				240/60/6		–	0...203	o. r.	o. r.
				24/DC/5		0...58	–	o. r.	o. r.
				24/DC/5		–	0...65	o. r.	o. r.
				24/60/4		0...145	0...145	o. r.	o. r.
				120/60/4		0...145	0...145	o. r.	o. r.
				240/60/4		0...145	0...145	o. r.	o. r.
				24/DC/14		–	0...218	o. r.	o. r.
				24/DC/11		0...174	–	o. r.	o. r.
				24/DC/11		–	0...189	o. r.	o. r.
		2.4	0.15	24/DC/6.5	100 % ED	–	0...44	o. r.	o. r.
				24/60/6		–	0...131	o. r.	o. r.
				120/60/6		–	0...131	o. r.	o. r.
				240/60/6		–	0...131	o. r.	o. r.
				24/DC/5		0...29	–	o. r.	o. r.
				24/DC/5		–	0...36	o. r.	o. r.
				24/60/4		0...94	0...94	o. r.	o. r.
				120/60/4		0...94	0...94	o. r.	o. r.
				240/60/4		0...94	0...94	o. r.	o. r.
				24/DC/14		–	0...116	o. r.	o. r.
				24/DC/11		0...87	–	o. r.	o. r.
				24/DC/11		–	0...94	o. r.	o. r.

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Circuit function	Port connection	Orifice	C _v value water ¹⁾	Voltage/Frequency/Power	Maximum duty cycle	Pressure range ²⁾ (MAWP ³⁾)		Article no.		
						Ambient temperature + 167 °F	Ambient temperature + 131 °F	Brass body	Stainless steel body	
		[mm]	[gal/min]	[V/Hz/W]		Air [psi]	Air [psi]	FKM seal		
CF A 2/2-way solenoid valve Direct-acting Normally closed 	Manifold (FK01)	1.2	0.05	24/DC/6.5	100 % ED	–	0...189	o. r.	o. r.	
				24/60/6		–	0...508	o. r.	o. r.	
				120/60/6		–	0...508	o. r.	o. r.	
				230/50/6		–	0...508	o. r.	o. r.	
				24/DC/5		0...131	–	o. r.	o. r.	
				24/DC/5		–	0...160	o. r.	o. r.	
				24/50/4		0...392	0...392	o. r.	o. r.	
				24/60/4		0...392	0...392	o. r.	o. r.	
				230/50/4		0...392	0...392	o. r.	o. r.	
				24/DC/14		50 % ED	–	0...464	o. r.	o. r.
				24/DC/11		0...363	–	o. r.	o. r.	
				24/DC/11		–	0...435	o. r.	o. r.	
		1.6	0.07	24/DC/6.5	100 % ED	–	0...123	o. r.	o. r.	
				24/60/6		–	0...348	o. r.	o. r.	
				120/60/6		–	0...348	o. r.	o. r.	
				240/60/6		–	0...348	o. r.	o. r.	
				24/DC/5		0...80	–	o. r.	o. r.	
				24/DC/5		–	0...94	o. r.	o. r.	
				24/60/4		0...247	0...247	o. r.	o. r.	
				120/60/4		0...247	0...247	o. r.	o. r.	
				240/60/4		0...247	0...247	o. r.	o. r.	
				24/DC/14		50 % ED	–	0...319	o. r.	o. r.
				24/DC/11		0...247	–	o. r.	o. r.	
				24/DC/11		–	0...261	o. r.	o. r.	
		2.0	0.13	24/DC/6.5	100 % ED	–	0...87	o. r.	o. r.	
				24/60/6		–	0...203	o. r.	o. r.	
				120/60/6		–	0...203	o. r.	o. r.	
				240/60/6		–	0...203	o. r.	o. r.	
				24/DC/5		0...58	–	o. r.	o. r.	
				24/DC/5		–	0...65	o. r.	o. r.	
				24/60/4		0...145	0...145	o. r.	o. r.	
				120/60/4		0...145	0...145	o. r.	o. r.	
				240/60/4		0...145	0...145	o. r.	o. r.	
				24/DC/14		50 % ED	–	0...218	o. r.	o. r.
				24/DC/11		0...174	–	o. r.	o. r.	
				24/DC/11		–	0...189	o. r.	o. r.	
		2.4	0.15	24/DC/6.5	100 % ED	–	0...44	o. r.	o. r.	
				24/60/6		–	0...131	o. r.	o. r.	
				120/60/6		–	0...131	o. r.	o. r.	
				240/60/6		–	0...131	o. r.	o. r.	
				24/DC/5		0...29	–	o. r.	o. r.	
				24/DC/5		–	0...36	o. r.	o. r.	
				24/60/4		0...94	0...94	o. r.	o. r.	
				120/60/4		0...94	0...94	o. r.	o. r.	
				240/60/4		0...94	0...94	o. r.	o. r.	
				24/DC/14		50 % ED	–	0...116	o. r.	o. r.
				24/DC/11		0...87	–	o. r.	o. r.	
				24/DC/11		–	0...94	o. r.	o. r.	

o. r. = on request

1.) Measurement at + 68 °F, 14.5 psi²⁾ at the valve inlet and free outlet

2.) Pressure data: overpressure to atmospheric pressure and air as a medium

3.) Maximum allowable working pressure

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Additional options

Note:

Available on request

Option	Variable Code	Description
Oxygen variants	NL02	Suitable for applications with oxygen (non-metal materials that are in contact with the medium are tested and approved according to BAM)
Increased purity requirements e.g. oil, grease and silicone-free	NL50/NL05	Wetted parts are specially cleaned and packaged in accordance with the valves
Increased tightness requirements	PC05	Leakage rate *less than 10 ⁻⁴ mbar l/sec
	PC08	Leakage rate *less than 10 ⁻⁵ mbar l/sec
	PC06	Leakage rate *less than 10 ⁻⁶ mbar l/sec

8.5. Ordering chart accessories

Single manifold

Note:

Further ordering information can be found in chapter "7. Performance specifications" on page 15.

Multiple manifold

Note:

Further ordering information can be found in chapter "5.4. Multiple manifold" on page 12.

Accessories for manifolds

Accessory	Features	Article no.
Threaded plug	With seal ring, G 1/8	005041
Cover plate	For unoccupied valve position	005100

Accessories for G 1/8 threaded connections


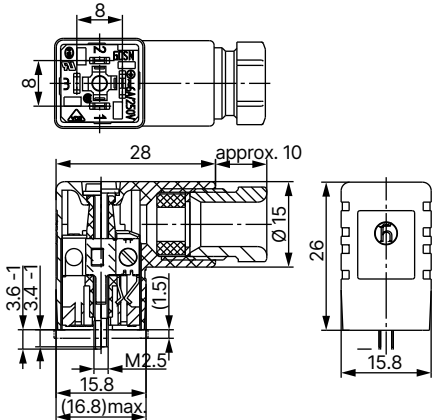
Accessories	Material	Connection diameter	F	L		L1		Article no.
		[mm]	[mm]	[mm]	[inch]	[mm]	[inch]	
Straight push-in connector with O-ring								
	Nickel-plated brass	4	G 1/8	18.0	0.71	-	-	780001
		6	G 1/8	21.6	0.85	-	-	780003
		8	G 1/8	25.4	1	-	-	780005
Elbow screw fitting, rotatable with O-ring								
	Nickel-plated brass	4	G 1/8	21.3	0.84	24.9	0.98	780081
		6	G 1/8	23.0	0.91	24.9	0.98	780082
		8	G 1/8	24.8	0.98	24.9	0.98	780086
	POM	4	G 1/8	35.5	1.4	24.0	0.94	782344
		6	G 1/8	39.5	1.56	27.0	1.06	782345
		8	G 1/8	41.5	1.63	30.0	1.18	782346

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026

Cable plug Type 2516, form C according to DIN EN 175301 - 803

Note:


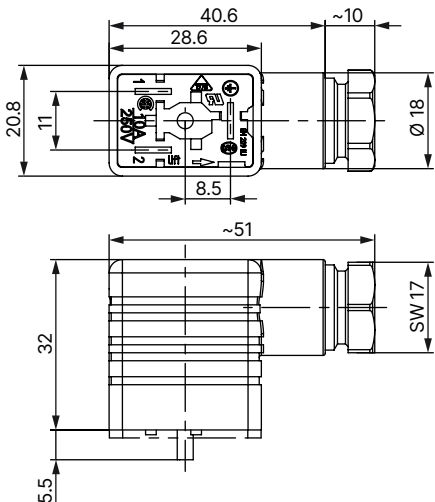
- Dimensions in mm
- Delivery of cable plug includes a flat seal and a fastening screw.
- For further variants see data sheet **Type 2516** ▶.

Cable plug	Dimensions	Variant	Voltage	Article no.
		Without wiring	0...250 V AC/DC	303141
		With LED	12...24 V AC/DC	303145
		With LED and varistor	12...24 V AC/DC	303148
		With rectifier, LED and varistor	12...24 V AC/DC	303142

Cable plug Type 2507, form B according to industry standard

Note:

- Dimensions in mm
- Delivery of cable plug includes a flat seal and a fastening screw.
- Refer to data sheet **Type 2507** ▶ for more information about the cable plug.

Cable plug	Dimensions	Variant	Voltage	Article no.
		Without wiring (standard)	2...250 V AC/DC	423845
		With LED	24 V AC/DC	423849
		With LED and free-wheeling diode	12...24 V AC/DC	423851
		With rectifier, LED and varistor	12...24 V AC/DC	423853
			2...250 V AC/DC	423854

DTS 1000582646 EN Version: D Status: RL (released | freigegeben | valide) printed: 18.02.2026