Design:

Voltage Clair with 2-way solenoid valve, direct acting. function A).

UL / UR valid With class 2 power supply

Seal Materials and Fluids handled:

Fluid and Ambient Temperature See Table.

Pressure Range:

Maximum inlet pressure see label on valve.

Before installing valve ensure that piping etc. is free of foreign matter (metal fillings, seal materials, welding scale etc.). Installation as required but preferably with coil uppermost. Installation in this position tends to prevent foreign matter remaining in core tube (increased life). Do not put any loads on coil unit.

Type 0255: PTFE tape is recommended for sealing ports. Arrow on valve body indicates flow direction. Mounting is accomplished by 2 holes 6.5 mm thru valve body.

Stainless Steel Seal Material **FPDM EPDM NBR NBR** FKM **FKM** = EΑ PTFE seat and EPDM O-ring EF PTFE seat and FKM O-ring CF FFKM seat and FKM O-ring **Circuit function** Normally Closed **FKM BR** 5/32 NPT1/4 PMAX 425PSI 60Hz 12W 450000Y W14UN Recorder No.

Voltage / Frequency / Power Consumption

Maximum Pressure

			Seal Materials					
	Fluid	Tempera- tures [°F]	Buna "N‰	Ethylene Propylene	FKM	Steel	PTFE	FFKM
	Air	Fluid T. Ambient	+ 14 to + 194 + 14 to + 130	- 40 to + 266 + 14 to + 130	+ 14 to + 266 + 14 to + 130	- 40 to + 356 + 14 to + 130	- 40 to + 356 + 14 to + 130	+ 14 to + 266 + 14 to + 130
	Water	Fluid T. Ambient	+ 50 to + 194 + 32 to + 130	+ 50 to + 212 + 32 to + 130	+ 50 to + 212 + 32 to + 130	+ 50 to + 212 + 32 to + 130	+ 50 to + 212 + 32 to + 130	+ 50 to + 212 + 32 to + 130
	Neutral Gas	Fluid T. Ambient	+ 14 to + 194 + 14 to + 130	- 40 to + 266 + 14 to + 130	+ 14 to + 266 + 14 to + 130	- 40 to + 356 + 14 to + 130	- 40 to + 356 + 14 to + 130	+ 14 to + 266 + 14 to + 130
	Light oil	Fluid T. Ambient	+ 50 to + 194 + 14 to + 130		+ 50 to + 194 + 14 to + 130	+ 50 to + 194 + 14 to + 130	+ 50 to + 194 + 14 to + 130	+ 50 to + 194 + 14 to + 130
	LP-gas	Fluid T. Ambient	+ 14 to + 140 + 14 to + 130		+ 14 to + 140 + 14 to + 130	+ 14 to + 140 + 14 to + 130	+ 14 to + 140 + 14 to + 130	+ 14 to + 140 + 14 to + 130
	Steam	Fluid T. Ambient		+ 212 to + 266 + 14 to + 130	+ 212 to + 266 + 14 to + 130	+ 212 to + 356 + 14 to + 130	+ 212 to + 356 + 14 to + 130	+ 212 to + 266 + 14 to + 130


Operating Instructions 0605/08_EU-EN_00893149

<u>burkert</u>

Operating Instructions

Wiring Diagram

Electrical Connection Type 2509

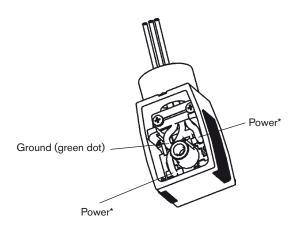

* Orientation is not important

Electrical Connection:

Ensure supply voltage/frequency corresponds with that on label. Voltage tolerance is \pm 10 %. Available Electrical Connections see "Marking". Wiring diagram see above.

For this product to be considered UL-listed and CSA approved for General Purpose and FM approved for Hazardous Locations Division 2, it must be in conjunction with the type 2509 cable plug connector (Electrically Operated Valves Parts, YSYI2).

The connector and gasket must be assembled to the valve with the screw provided after the connection of the wire leads. This valve and connector assembly is delivered together and is to be used as one unit

For valves to be used in Intrinsically Safe Applications the positive pole is identified by a "+" on the pin or wire No. 1 has to be connected to the "+".

See Control Drawing for the Rules of Interconnection.

Warning:

All valves to be used in Intrinsically Safe Applications must be clearly marked as Intrinsically Safe Apparatus.

Trouble-Shooting:

Check port connections, minimum operating pressure differential if required and supply voltage. Ensure pilot hole in piston is clear and pilot bore in the valve outlet is not abstracted. If core does not pull in, check for short circuit, coil burn-out or foreign matter impeding core movement. A jammed or missing core causes the coil to overheat in the case of AC supply.

Warning

These products are designed to operate in a wide variety of applications, it is the user's responsibility to select a model that is appropriate for the application. This product is designed to be installed only by suitably qualified and trained personnel.

Specifications should not be exceeded under any circumstances.

The torque for the terminal screw on type 2509 is 0,5 Nm (4,4 lbf-in.).

Changes made to this product will render any applicable warranty null and avoid.

Specifications subject to change without notice.

Any questions? Please call Bürkert Contromatic Technical Service at (949) 223 31 00.

burkert

Germany

Contact address:

Bürkert Fluid Control Systems Sales Center Chr.-Bürkert-Str. 13-17 D-74653 Ingelfingen

Tel. + 49 (0) 7940 - 10 91 111 Fax + 49 (0) 7940 - 10 91 448 E-mail: info@de.buerkert.com

International

Contact addresses can be found on the Internet at:

www.burkert.com → Bürkert → Company → Locations