


## Type 8741

Substitute for 8701, 8711, 8703,  
8713

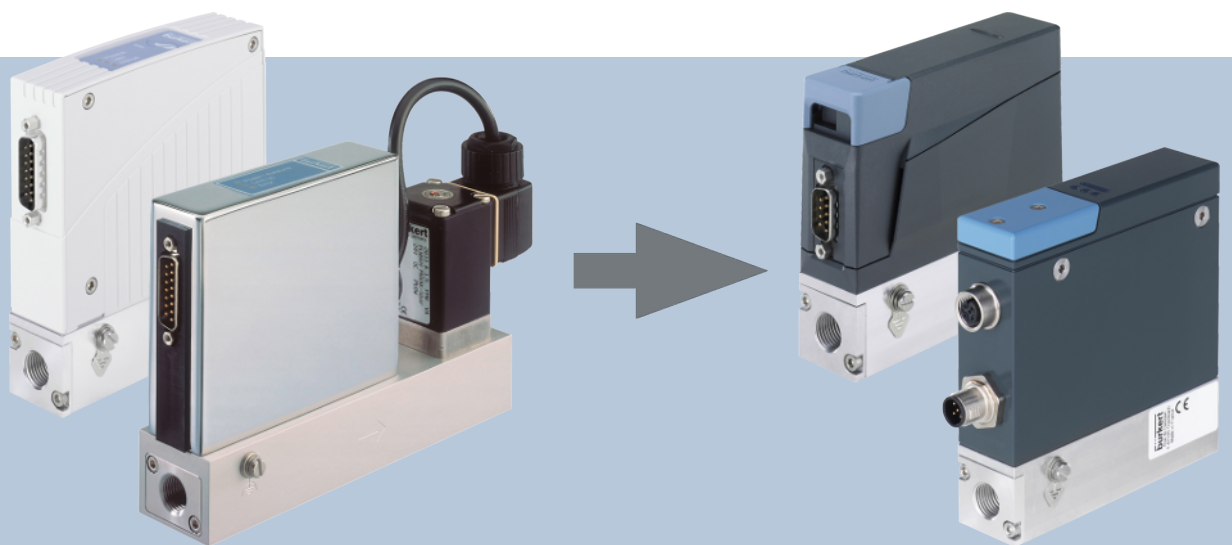

# Replacement Instructions

We reserve the right to make technical changes without notice.

© Bürkert Werke GmbH & Co. KG, 2023

Operating Instructions 2307/01 00574519 / Original DE

# CONTENTS

<b>1</b>	<b>About these instructions</b> .....	<b>4</b>
1.1	New generations of MFM/MFC devices .....	4
1.2	Manufacturer .....	4
<b>2</b>	<b>Electrical connection</b> .....	<b>5</b>
2.1	Analogue/D-Sub adaptation .....	5
2.2	PROFIBUS/M12 adaptation .....	5
2.3	RS422/RS485 adaptation .....	6
<b>3</b>	<b>Installation</b> .....	<b>7</b>
3.1	Body with threaded connection: installation length .....	7
3.2	Body with threaded connection: mounting holes .....	7
3.3	Body with flange connection .....	7

# 1 ABOUT THESE INSTRUCTIONS

These instructions are supplemental to the operating instructions. The operating instructions for the device must be followed to ensure safe use of the device for its intended purpose.



## DANGER!

Risk of injury due to incorrect use of the device

→ Please read the operating instructions thoroughly prior to using and operating the device.



Operating instructions and further product-related information at [country.burkert.com](https://country.burkert.com) > Type number (enter in search mask).

## 1.1 New generations of MFM/MFC devices

These instructions explain the exchange process for devices that are no longer available and their replacement with new, compact and technically up-to-date devices.

We are providing these instructions as a means to help integrate the new device into your existing system and enable a smooth and complication-free replacement process.

The new generations of devices from Bürkert can be parameterised and configured to the Bürkert Communicator software via the integrated bÜS interface.



The Bürkert Communicator software can be downloaded free of charge from [country.burkert.com](https://country.burkert.com).

The USB-bÜS-Interface set is required to connect to the Bürkert Communicator.

Accessories	Order number
USB-bÜS interface set 1 (including power supply unit, bÜS stick with terminating resistor, Y-distributor, 0.7 m cable with M12 plug)	772426
USB-bÜS interface set 2 (including bÜS stick with terminating resistor, Y-distributor, 0.7 m cable with M12 plug)	772551

Tab. 1: Accessories

## 1.2 Manufacturer

Bürkert Fluid Control Systems

Christian-Bürkert-Str. 13–17

D-74653 Ingelfingen



The contact addresses are available at [country.burkert.com](https://country.burkert.com) in the menu "Contact".

## 2 ELECTRICAL CONNECTION

### **!** DANGER!

Risk of injury from electric shock.

- Switch off the power supply before working on the device or system. Secure it against reactivation.
- Observe the applicable accident prevention and safety regulations for electrical devices.



If required, the device can be parameterised and configured using the Bürkert Communicator software via the büS interface.

### 2.1 Analogue/D-Sub adaptation

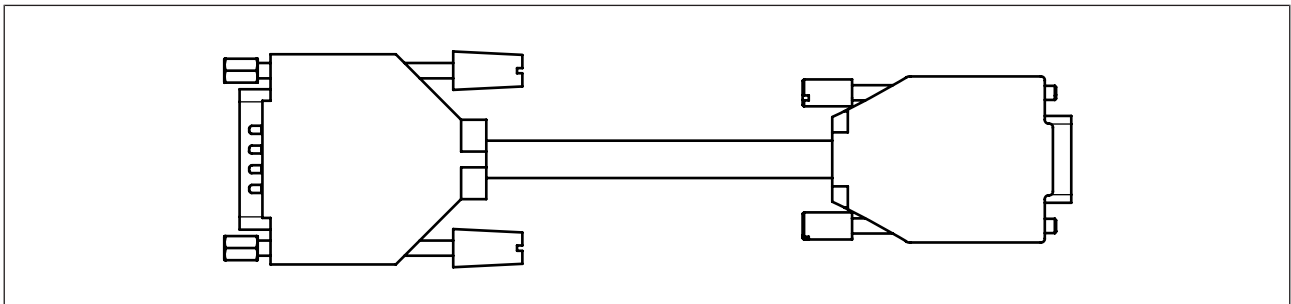


Fig. 1: Adapter cable included in delivery

- Disconnect available electrical connections from the device.
- Connect available electrical connections using the adapter cable.
- Connect the new device using the adapter cable.



Following device replacement, only 1 binary input and 1 binary output are available with the amended specifications.

### 2.2 PROFIBUS/M12 adaptation




Fig. 2: Adapter cable included in delivery

- Disconnect the current device from the system, including connection cable.
- Connect the new device to the system using the adapter cable.



The new device has a different GSD file. The GSD file must be amended in the programmable logic controller.

- Download the GSD file at [country.burkert.com](https://country.burkert.com) > Type 8742 and update in the programmable logic controller.



The new device has no binary inputs or outputs.

## **2.3 RS422/RS485 adaptation**

This variant is compatible.

- Separate existing device from connection cable.
- Connect new device using the available connection cable.

## **3 INSTALLATION**

### **3.1 Body with threaded connection: installation length**

The devices have been adapted to be compatible with the installation length.

### **3.2 Body with threaded connection: mounting holes**

The devices have been adapted to allow for continued use of the existing mounting holes.

### **3.3 Body with flange connection**

The devices have been adapted to be compatible with the existing flange pattern.