


Type 8756

Mass Flow Meter for liquids, with ATEX/IECEX certification
Massendurchflussmesser für Flüssigkeiten mit ATEX/IECEX-Zulassung
Débitmètre massique pour liquides, avec certification ATEX/IECEX

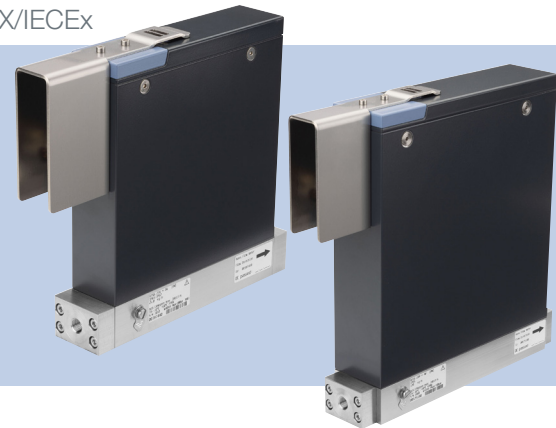

Additional Instructions

Zusatzanleitung
Instructions supplémentaires



We reserve the right to make technical changes without notice.
Technische Änderungen vorbehalten.
Sous réserve de modifications techniques.

© Bürkert SAS 2023

Operating Instructions 2311/02_EU-ML_00574316 / Original EN

- 1. ADDITIONAL INSTRUCTIONS 4
 - 1.1. Definition of terms / abbreviation 4
- 2. SYMBOLS 4
- 3. INTENDED USE 5
 - 3.1. Identification of an Ex-certified product variant 5
- 4. PARTICULAR SAFETY INSTRUCTIONS 6
 - 4.1. Particular conditions 7
 - 4.2. Instructions for use in Ex. areas 7
 - 4.2.1. Safety instructions 7
 - 4.2.2. Adhesive label for Ex. areas 7
 - 4.2.3. Ambient temperature and temperature class in the Ex. area 8
 - 4.2.4. IP code in Ex. areas 8
 - 4.2.5. Media in the Ex. area 8
 - 4.2.6. Cleaning in the Ex. area 8
 - 4.2.7. Tightening torque of the M8 or M12 sealing cap 8
 - 4.3. Ex. certification 8
- 5. OPERATIONAL CONDITIONS..... 8
 - 5.1. Special conditions 8

1 ADDITIONAL INSTRUCTIONS

The additional instructions for the use in potentially explosive environments describe the entire life cycle of the product. Keep these instructions in a location which is easily accessible to every user and make these instructions available to every new owner of the product.

Important safety information.

Read the additional instructions carefully and thoroughly. Study in particular the chapters entitled "[Intended use](#)" and "[Particular safety instructions](#)".

- ▶ The additional instructions must be read and understood.

The additional instructions describe safety instructions and information for the use in a potentially explosive environment.

All other descriptions and instructions can be found in the Operating Instructions of the product for the type 8756.



The Operating Instructions can be found on the Internet at: country.burkert.com

1.1 Definition of terms / abbreviation

In these instructions, the term product always refers to the Mass Flow Meter (MFM) Type 8756.



In these instructions, the abbreviation "Ex" always refers to "potentially explosive".

2 SYMBOLS

The following symbols are used in these instructions.



DANGER

Warns of an immediate danger.

- ▶ Failure to observe the warning will result in a fatal or serious injury.



WARNING

Warns of a potentially dangerous situation.

- ▶ Failure to observe the warning may result in a serious or fatal injury.



CAUTION

Warns of a possible danger.

- ▶ Failure to observe this warning may result in a moderate or minor injury.

NOTE

Warns of material damage.



Important advice and recommendations.



Refers to information in these instructions or in other documentation.

- ▶ Designates an instruction for risk prevention.
- Designates a work step which you must carry out.

3 INTENDED USE

Incorrect use of the Mass Flow Meter (MFM) Type 8756 can be dangerous to people, nearby equipment and the environment.

MFM Type 8756 is used exclusively to measure the mass flow rate of liquids.

- ▶ The product was designed for the use in explosion group II 3G Ex ec nC IIC T5 Gc / Ex ec nC IIC T5 Gc and in explosion group II 3D Ex tc IIIC T100°C Dc / Ex tc IIIC T100°C Dc (see the information given on the certification sticker and in chap. 4.2.3 Ambient temperature and temperature class in the [Ex. area](#)).
- ▶ Observe the admissible data, the operating conditions and conditions of use specified in the contract documents, in the Operating Instructions and on the Type label of the product.
- ▶ Use the product only in conjunction with third-party instruments and components recommended and authorized by Bürkert.
- ▶ Correct transportation, storage and installation, as well as careful use and maintenance are essential for reliable and faultless operation.
- ▶ Use the product as intended.

3.1 Identification of an Ex-certified product variant

The variable key PX72 on the Type label identifies an Ex-certified product variant. Refer to [Fig. 1](#).

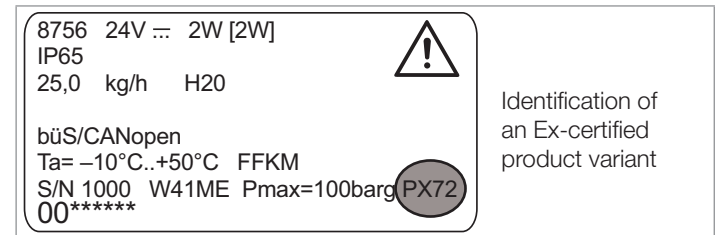


Fig. 1: Location of the variable key PX72 on the Type label

4 PARTICULAR SAFETY INSTRUCTIONS



DANGER

Risk of explosion when removing the female connector.

- ▶ After wiring of the product, screw the impact protection cover to protect the M8 or the M12 female connector from disconnection without tools.
- ▶ Before removing the female connector disconnect the power supply.

Risk of explosion when opening the product.

- ▶ Only open the blind plug if no Ex. atmosphere is present.
- ▶ No Ex. atmosphere must be present when setting the type of field bus or replacing the configuration memory.
- ▶ Before commissioning tighten the mounting screws to protect the shock protection cover against removal without tools.

Risk of explosion due to electrostatic discharge.

In the event of a sudden discharge, electrostatically charged products or persons present a risk of explosion in the Ex. area.

- ▶ Take appropriate measures to ensure that there can be no electrostatic charging in the Ex. area.
- ▶ Only clean the product surface by gently wiping with a damp or anti-static cloth.



DANGER

To prevent the risk of explosion, observe not only the safety instructions in the Operating Instructions for operation in the Ex. area, but also the following:

- ▶ Observe information on temperature class, ambient temperature, protection rating, torque and voltage.
- ▶ Do not use the product in areas where there is gas or dust with a lower ignition temperature than indicated on the label for Ex. area.
- ▶ Installation, operation and maintenance must be performed by qualified technicians only.
- ▶ Observe the applicable safety regulations (also national safety regulations) as well as the general rules of technology for construction and operation.
- ▶ Do not repair the product yourself, but replace it with an equivalent product.
- ▶ The product must only be repaired by the manufacturer.
- ▶ Do not expose the product to any mechanical and/or thermal loads which will exceed the limits given in the Operating Instructions.
- ▶ Use only cables which have been approved for the respective application area and which have been connected according to the related mounting instructions.
- ▶ The IP protection rating is only guaranteed if a round connector compliant with IEC 61076-2-101 or the provided M8 or M12 sealing cap is used.
- ▶ In an Ex. atmosphere, the M8 or the M12 fixed connector must be equipped with a female connector compliant with IEC 61076-2-101, overmolded with plastic, or with the provided M8 or M12 sealing cap.



DANGER

- ▶ The mechanical strength is only guaranteed if the shock protection cover is mounted and securely tightened with the fastening screws.
- ▶ Use adequate measures to prevent transient overvoltages greater than 40% of the rated voltage.

4.1 Particular conditions

Observe the special ambient temperatures for use in Ex. areas. See chap. 4.2.3

4.2 Instructions for use in Ex. areas

4.2.1 Safety instructions

Use in an Ex. area (Gas) 2 gives rise to:



DANGER

Risk of explosion in Ex. areas due to sudden discharge of electrostatically charged products or persons.

- ▶ Take appropriate measures to ensure that there can be no electrostatic charging in the Ex. area.
- ▶ Only clean the product surface by gently wiping with a damp or anti-static cloth.

4.2.2 Adhesive label for Ex. areas

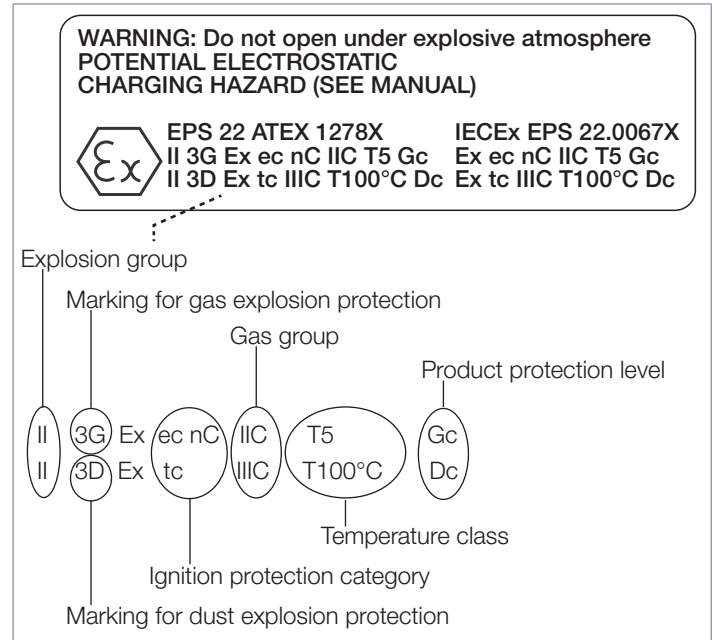


Fig. 2: Label for Ex. areas

4.2.3 Ambient temperature and temperature class in the Ex. area

Product Type	Ambient temperature range
Type 8756 without a valve	-10 °C...+50 °C

Tab. 1: Ambient temperature range for products with temperature class T5 / 100°C

4.2.4 IP code in Ex. areas

Type 8756 Ex: IP65

4.2.5 Media in the Ex. area



The use of potentially explosive media can result in an additional risk of explosion.

4.2.6 Cleaning in the Ex. area



Check that cleaning agent have approval for use in explosive atmospheres.

4.2.7 Tightening torque of the M8 or M12 sealing cap



When screwing on the M8 or on the M12 sealing cap again, apply a tightening torque 0.5 N·m (0.29 bf·ft).

4.3 Ex. certification

The Ex. certification is only valid if the Bürkert product is used as described in these additional instructions.

If unauthorized changes are made to the product, the Ex. certification becomes invalid.

5 OPERATIONAL CONDITIONS

5.1 Special conditions

- ▶ Only use the product in an area that has at least pollution degree 2, as defined in IEC 60664-1.
- ▶ Do not use the product in areas where strongly charge-generating processes can occur (for example mechanical friction and separation processes, painting equipment, pneumatic conveying processes).
- ▶ Only clean the product surface by gently wiping with a damp or anti-static cloth.
- ▶ Use adequate measures to prevent transient overvoltages greater than 40% of the rated voltage.
- ▶ Do not expose the product to any mechanical and/or thermal loads which will exceed the limits given in the Operating Instructions.
- ▶ Use the device in the following ambient temperature range: -10°C...+50°C.

www.burkert.com